
## 2 Hands, 3 Hands Movement



## **Features**

♦ Hour, Minute and Second Hands

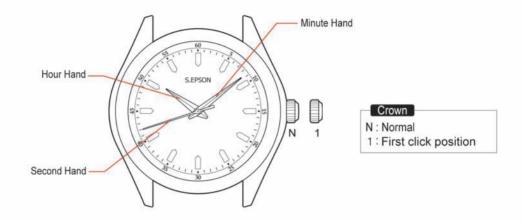


	2 hands	3 hands	Size	Diameter				
Cal.				Outside	Casing	Height	Battery	Battery life Approx.
YL50	0		Small	Ø9.5 x 9.00mm (3H-9H)	8.50mm (3H-9H)	2.78mm	SR512SW	2 years
YL60	0		4 3/4"	Ø13.50mm x 10.80mm (3H-9H)	Ø13.00mm x 10.80mm (3H-9H)	2.09mm	SR416SW	3 years
YL61		0				2.39mm	SR421SW	2 years
VX00	0			14.50mm(12H-6H) x 10.80mm (3H-9H)	13.75mm (12H-6H) x 10.80mm (3H-9H)	2.09mm	SR516SW	3 years
VX01		0				2.39mm	SR521SW	2 years
VX10	0		5 1/2"	15.55mm (12H-6H) x 13.00mm (3H-9H)	15.15mm (12H-6H) x 11.80mm (3H-9H)	2.19mm	SR516SW	3 years
VX11		0				2.49mm	SR521SW	2 years
VX50	0			15.30mm (3H-9H) x 18.20 (12H-6H)	15.30mm (3H-9H) x 17.80mm (3H-6H)	2.16mm	SR616SW	5 years
VX51		0 0				2.30 mm	SR621SW	3 years
Y120E	0					2.99mm	SR626SW	2 years
Y120G	0							4 years
Y121E								2 years
Y121G			6 x 8'''					4 years
Y127	0						1.5 years	
AL20								2 years
AL21		0						
AL35		0						
AL55		0						
YR67		0	10 1/2"	Ø24.00mm x 21.30mm (3H-9H) x 22.50mm (12H-6H)	Ø23.30mm x 21.30mm (3H-9H) x 22.50mm (12H-6H)	3.05mm	SR927SW	1.5 years




## 2 Hands, 3 Hands Movement



## How to Set Time:

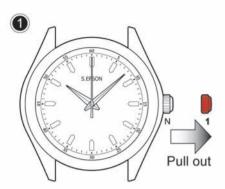


• If your watch is three hands type, pull crown out when the second hand is at the 12 o'clock position.

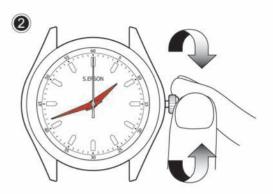

• Turn the crown to set the time.

Note: When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.

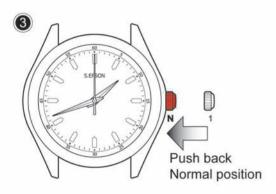

• Push crown back to normal position. See the second hand begins to run.

