


# **TECHNICAL GUIDE** & PARTS CATALOGUE Cal.VD57B ANALOGUE QUARTZ



## PARTS CATALOGUE / TECHNICAL GUIDE

## Cal.VD57B


[SPECIFIC/	Cal. No.	Version-0			
Item		VD57B			
Movement					
	Outside diameter	φ29.50 mm(12H - 6H)× 26.00 mm			
Movement size	Casing diameter	φ28.80 mm(12H - 6H)			
	Total height	4.57 mm			
Time indication		3 Hands ( Hour , Minute , Second ) Chronograph ( Minute , Second , 1/10 second ) Calendar			
Driving System		Two pole stepping motor Step motor 3 pieces			
Additional mechanism		Electronic circuit reset switch Second setting device [ Time ] Indicated by the Hour, Minute, Second and Calendar [ Stop watch ] Up to 1 minutes in 1/10 second ( 2 seconds per round ) Up to 60 minutes in 1 second split time			
Antimagnetic		≧ 1600 A/m			
Accuracy		Less than ± 20seconds : Monthly rate at normal temperature range			
Battery		SR920SW (SEIZAIKEN) Silver oxide battery $\varphi$ 9.5 x t 2.0 mm Battery life is approximately 2 years			
Measuring gate by quartz tester		Use 10-second gate *Set the winding stem with crown at the normal position			
Jewels		0 Jewel			

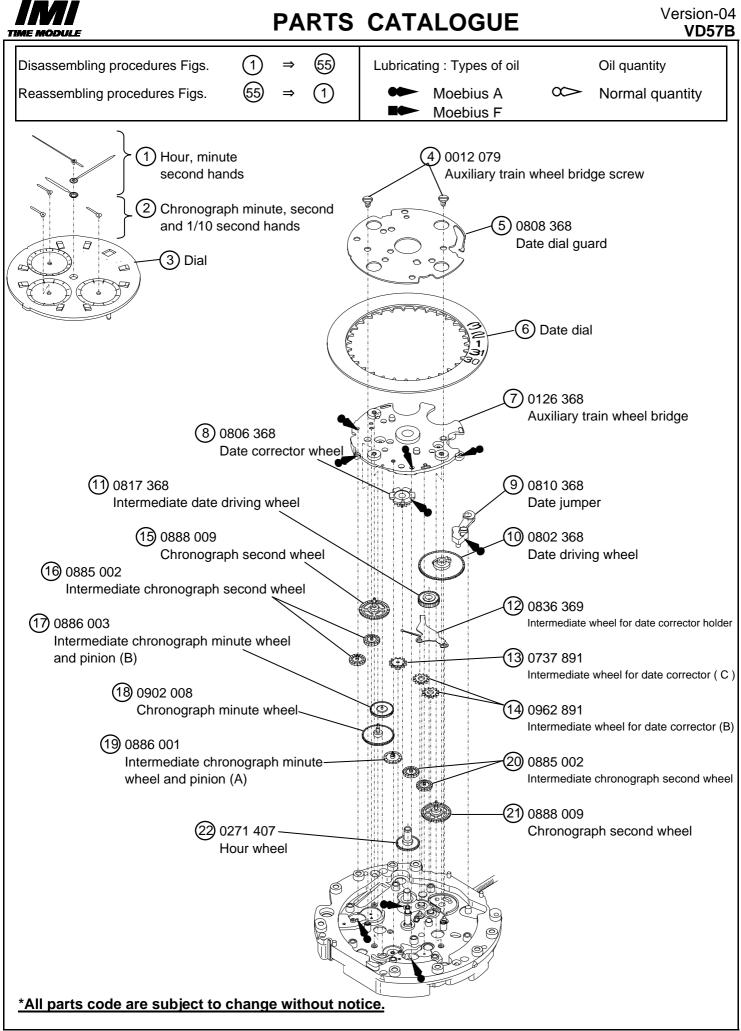



## PARTS CATALOGUE


Version-05 VD57B

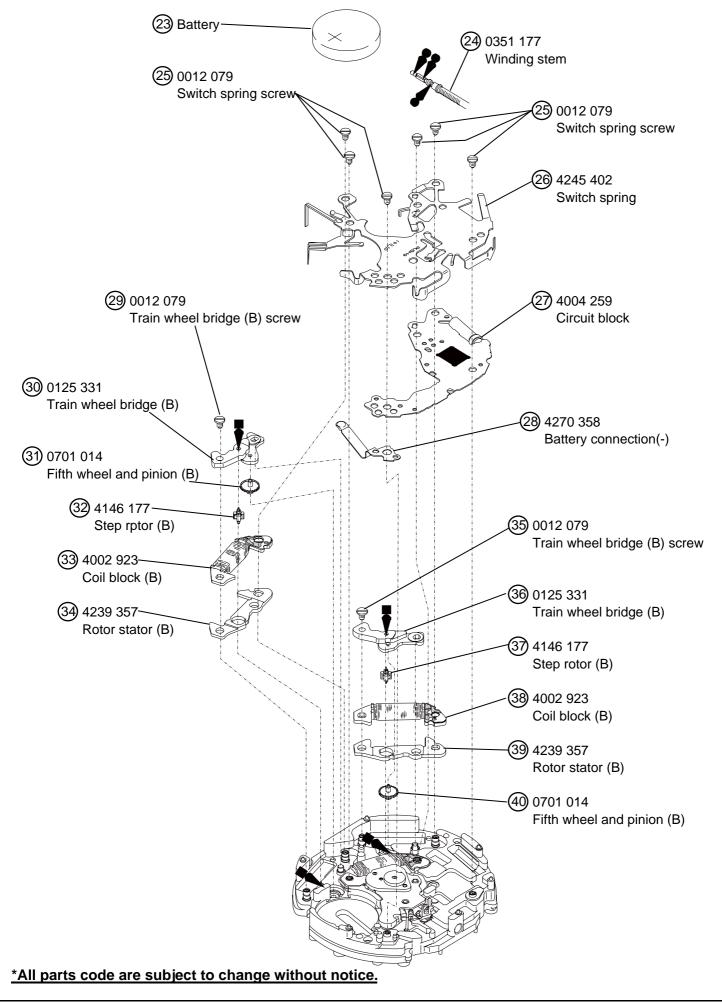



## PARTS CATALOGUE

Version-04 VD57B

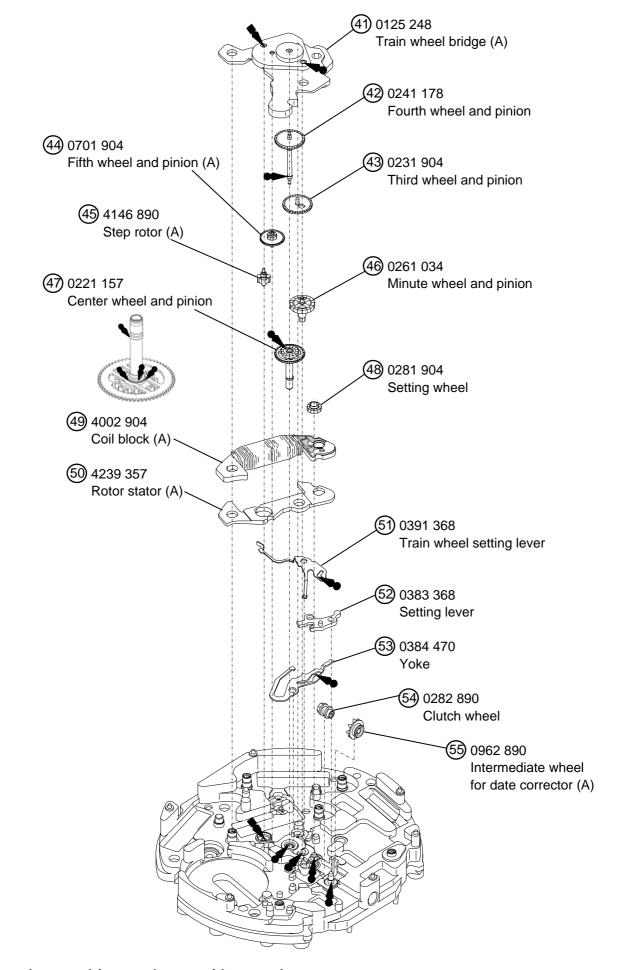

\*All parts code are subject to change without notice.



Remark :

6 Date dial

_								
	Part code	Position of crown	Position of date frame	Color of figure	Color of background			
	0878 220	3H	3H	Black	white			
	0878 221	3H	3H	white	Black			

\* All parts code are subject to change without notice.

**TECHNICAL GUIDE** 



Tweezers

- •The explanation here is only for the particular point of Cal.VD57B
- **1.REMARKS ON INSTALLING THE BATTERY** 
  - After the battery is replaced with a new one or after the battery is reinstalled following the repairing procedures, Be sure to touch the short-circuit the AC terminal of circuit block and the switch spring with conductive tweezers to reset the circuit as illustrated at right.

 When the battery replaced with a new one, the time information stored in the built-in IC and the time indicated by the stopwatch hands do not correspond with each other. Reset the stopwatch hands to "0" position following the procedure below.
If the stopwatch hands should move improperly, also follow the same procedure.


#### ORDER

(1) Pull out the crown.

(2) Keep the buttons "A" and "B" pressed at the same time for 2 seconds, and then, release the buttons. The stopwatch second hand move back and returned to where it was.

- ③ Press button "A" or "B" to reset the stopwatch second and minute hands to"0" position.
  - $^{\ast}$  By pressing button "A" , set the stopwatch 1/10 second hand.
  - \* By pressing button "B", set the stopwatch second and minute hands.

(4) Turn the crown to set the hour, and minute and 24-hour hands to the desired time, and push the crown back to the normal position.

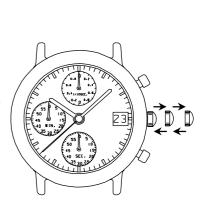



#### 1.REMARKS ON INSTALLING THE BATTERY


#### (1) HAND

·How to install the hands

Place the movement directly on a flat metal plate or the like and press in the hands.

\* Install the hour, minute and second hands at the "12"o'clock position.


\* Install the chrono minute and second hands at the "0"o'clock position.

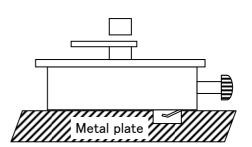


[Reference]	The power	of press hands
Minute & Hour	Hands	< 5kg
Second Hand		< 5kg
Chrono Minute	& Second	< 3kg

#### (2) Battery


- •How to install the battery
- (1) Remove the hook of the switch springs battery clamp portion.
- (2) Insert the battery sideways, and have the hook of the switch springs battery clamp portion catch the main plate.

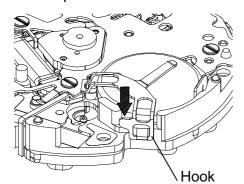

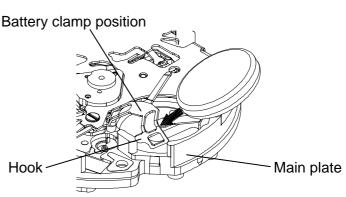


(3) Winding stem • How to remove


While pushing the indented portion of the arrow pull out the winding stem.

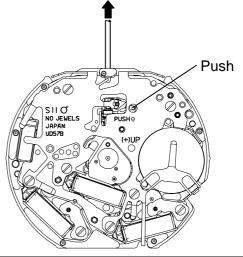



## **OPERATION**

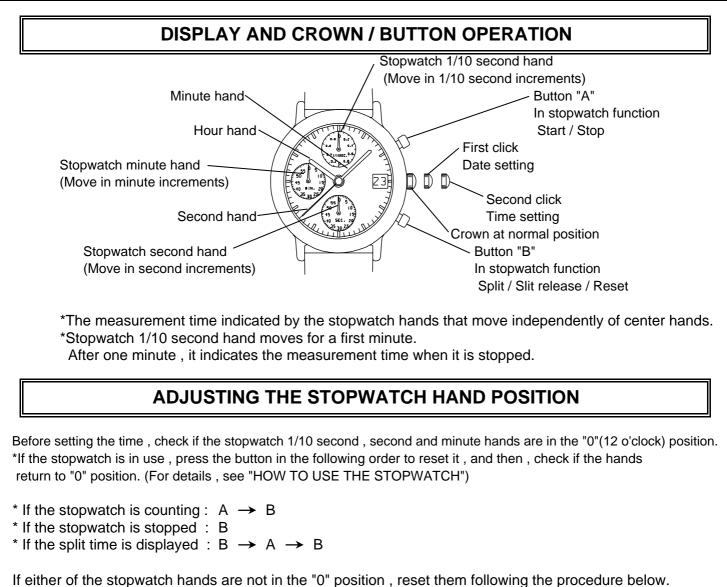


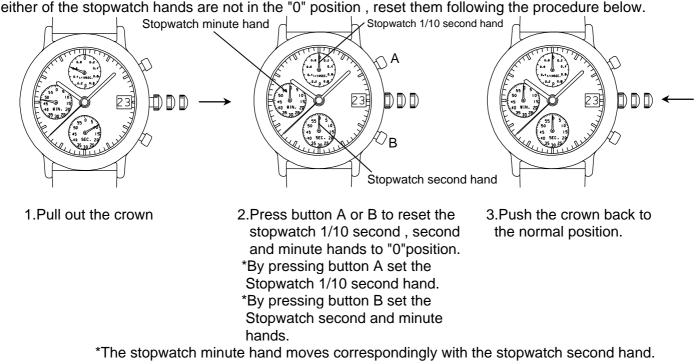


\*The hands move quickly if the respective buttons are kept pressed.




## **OPERATION**

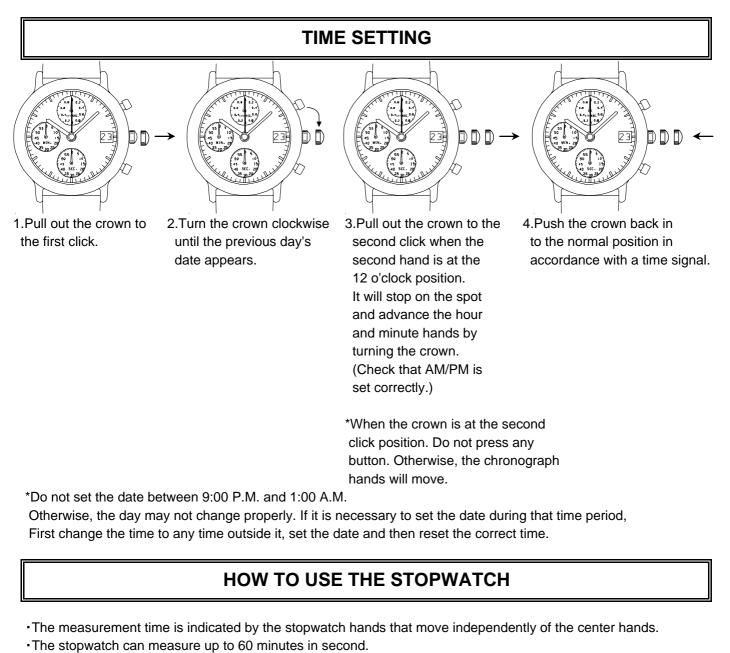

(The watch indicates the measurement time in second increments by ignoring off the 1/10 seconds obtained.)

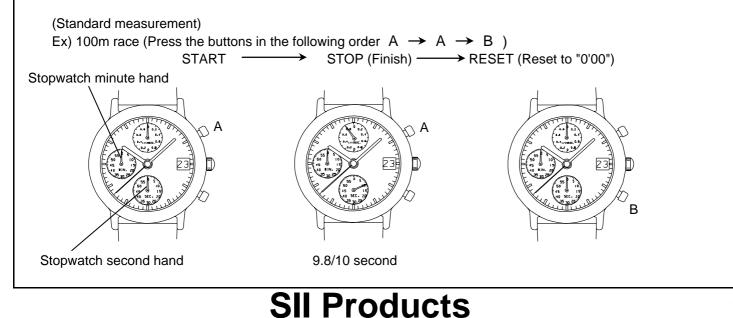

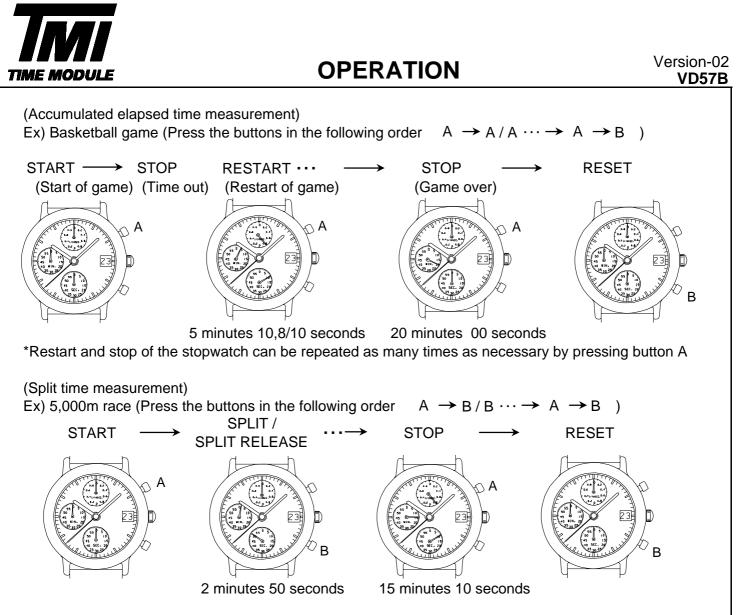

\* Measurement and release of the split time can be repeated as many times as necessary by pressing button B.