
# Features

- ◆ Hour, Minute and Second Hands
- ◆ Day and Date indicators

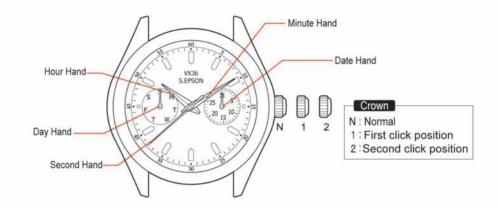


Movement size	10 1/2"
Outside Diameter	21.50 mm (12H-6H) X 21.50 mm (3H-9H)
Casing Diameter	21.50 mm (12H-6H) X 21.30 mm (3H-9H)
Height	3.05 mm (Including Battery)
Battery	SR916SW
Battery Life Approx.	3 years


- ◆ Timing of day changes
  - The date hand moves to the next between 11:00p.m. and 12:00a.m.
  - The day hand moves to the next between 2:00a.m. and 4:00a.m.



# How to Set Time and Day:

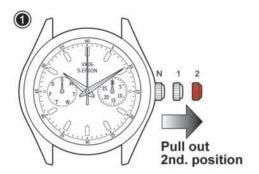


• Pull crown out to the 2nd click position when the second hand is at the 12 o'clock position.

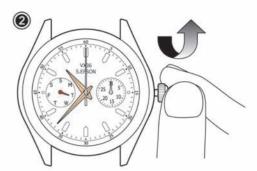


 Turn the crown clockwise to advance hour and minute hands until day hand is set to the desired day of the week.

Note: The day hand will not back by turning the crown counterclockwise.

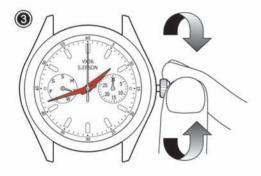

Turn to set the time taking AM or PM into consideration.

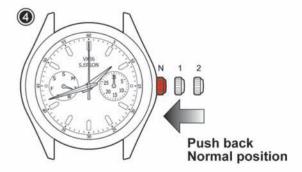

Push crown back to normal position.

### ♦ Advance Setting Technique


• To advance the day hand quickly, turn back the hour and minute hands 4 to 5 hours beyond the point the day changes (between 11:00 p.m. and 4:00 a.m.) and then advance them again until the day hand is set to the next.

Note: The day hand will not move back by turning the crown counterclockwise.


 When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to exact time.



# How to Set Date:

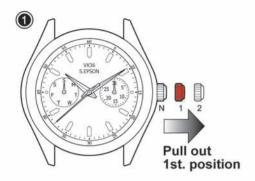


• Pull crown out to the 1st click position.

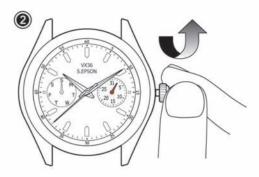

• Turn the crown clockwise to set date hand.

Note: The date hand will not back by turning the crown counterclockwise.

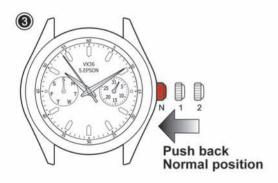

• Push crown back to normal position.

### ◆ Advance Setting Technique

- Do not set the date hand between 9:00 p.m. and 1:00 a.m. Otherwise, it may not turn properly.
- While setting the date hand, check that it moves properly in one-day increments.
- It is necessary to adjust the date on the first day after a 30-day month and February.

