
## **Features**

- ♦ Hour, Minute and Second Hands
- ◆ Date and 24H indicators

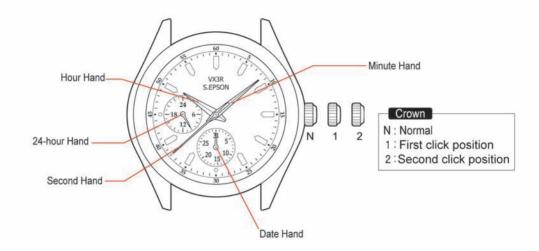


Movement size	10 1/2"
Outside Diameter	21.50 mm (12H-6H) X 21.50 mm (3H-9H)
Casing Diameter	21.50 mm (12H-6H) X 21.30 mm (3H-9H)
Height	3.05 mm (Including Battery)
Battery	SR920SW
Battery Life Approx.	3 years


- ◆ Timing of day changes
  - The date hand moves to the next between 11:00p.m. and 12:00a.m.
  - The day hand moves to the next between 2:00a.m. and 4:00a.m.




## How to Set Time:

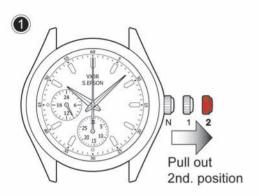

• Pull crown out to the 2nd click position when the second hand is at the 12 o'clock position.

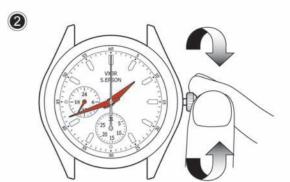


 Turn the crown clockwise to set the desired time taking AM or PM into consideration.

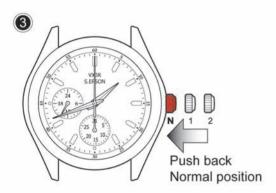

- Push crown back to normal position.
- ◆ Advance Setting Technique
  - The 24-hour hand moves correspondingly with the hour hand.
  - When setting the hour hand, check that the 24-hour hand is correctly set.
  - When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.



## How to Set Date:

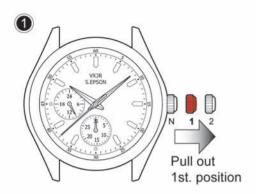


• Pull crown out to the 1st click position.



• Turn the crown counterclockwise to set date hand.

Note: The date hand will not move back by turning the crown clockwise.

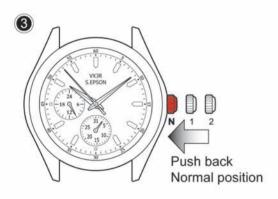

- Push crown back to normal position.
- ◆ Advance Setting Technique
  - Do not set the date hand between 9:00p.m. and 1:00a.m. Otherwise, it may not turn properly.
  - While setting the date hand, check that it moves properly in one-day increments.
  - It is neccessary to adjust the date on the first day after a 30-day month and Feburary.

