
# INSTRUCTION MANUAL FOR MIYOTA WATCH MOVEMENT

## **AUTOMATIC MECHANICAL MOVEMENT**

#### INSTRUCTION MANUAL

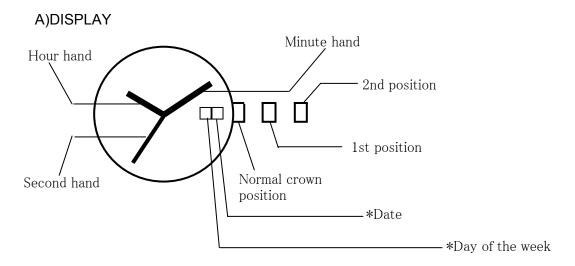

\*Date & Day of the week position may be located at different position depends on models.

## B) Winding the mainspring

Automatic winding watch can also be hand winded by turning the crown in "A" position. Wind 15-20 times and it will start to move naturally after shaking slightly.

## C) SETTING THE TIME

- 1. Pull the crown out to the 1st position.
- 2. Turn the crown to set hour and minute hands.
- 3. Push the crown back to the normal position.

## D) SETTING THE DATE

- 1. Pull the crown out to the 1st position.
- 2. Pull the crown from the 1st position to the 2nd position, then date advances one day.
- 3. After the date has been set, push the crown back to the normal position.

## E) SETTING THE DAY OF THE WEEK

- 1. Pull the crown out to the 1st position.
- 2. Turn the crown to set the day of the week.
  - \* If the day of the week is set between the hours of around 9:00 PM and 4:00 AM, the day of the week may not change the following day.
- 3. After the day of the week has been set, push the crown back to the normal position.