






A

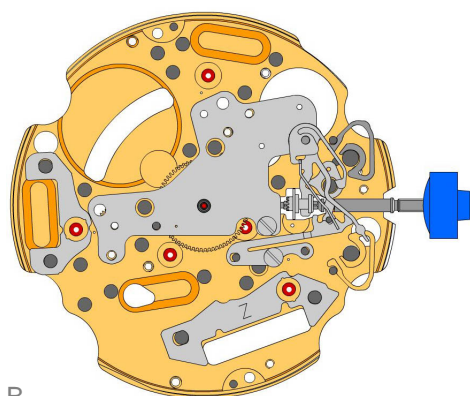

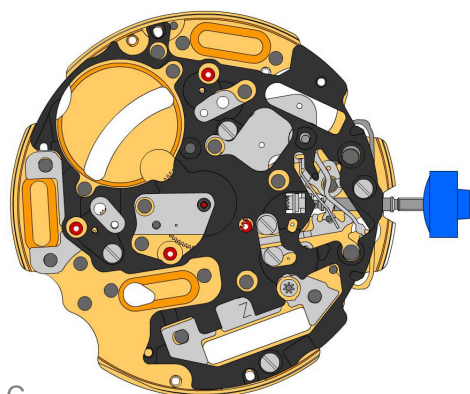















B




C

2000.574.G		Main plate
1.		
3305.290.CO		Cannon pinion with driver (Aig.2, closed)
2.		
3301.243		Hour wheel (counter 12h)
3.		

2030.017.CO		Centre bridge
4.		Centre bridge held by 1 screw 4000.250. Parts 2030.017.CO, 3004.223 and 3500.059 must be exchanged together.
4000.250		Screw
5.		
3001.055.FI		Sliding pinion
6.		
3000.177.CO		Setting stem
7.		
3017.049		Setting lever
8.		
3905.049		Setting lever jumper (3 positions) Setting lever jumper tenue par 1 vis 4000.250.
9.		
4000.250		Screw
10.		
3015.081		Yoke (3 positions)
11.		
3905.067		Yoke spring Tensioning the spring arm. Parts 3015.081 and 3905.067 must be exchanged together.
12.		
3406.030		Pusher jumper B Put the grey jumper between the two posts on the further side.
13.		
3406.038		Pusher jumper A Put the yellow jumper between the two posts on the closer side.
14.		
3622.040		Stator Mark [Z] on stator.
15.		
3622.039		Stator (counter 6h, 9h, chrono)
16.		

3603.079		Plastic bracket
17.		Plastic bracket held by 1 screw 4000.250.
4000.250		Screw
18.		
3715.094.RK		Rotor
19.		

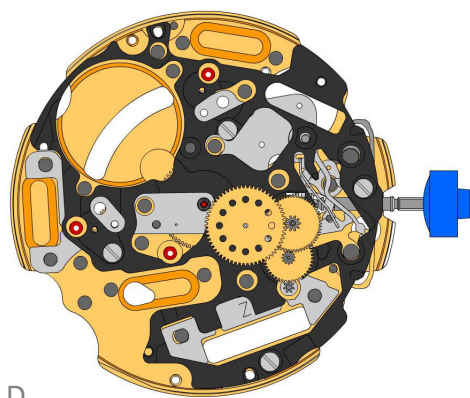


D


3147.046.CO
20.  Intermediate wheel

3136.142.CO
21.  Second wheel (long)

3122.056.CO
22.  Third wheel


2020.148.G
23.  Train wheel bridge
Train wheel bridge held by 3 screws 4000.250.

4000.250
24.  Screw

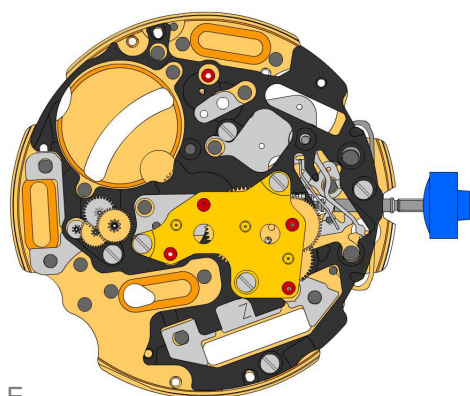


E

3715.095.RK
25.  Rotor


3147.048.CO
26.  Intermediate wheel (counter)

3007.055.CO
27.  Minute wheel (counter 12h)


3402.007.CO
28.  Minute counting wheel (12h)


2020.149.G
29.  Counter train wheel bridge
Counter train wheel bridge held by 3 screws 4000.250.

4000.250
30.  Screw

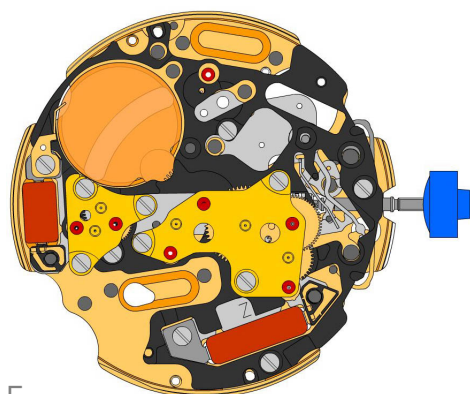

F

3621.053.RK
31.  Coil
Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.

3621.054.RK
32.  Coil (counter 9h, chrono)
Attention: Please hold the coil only on the grey coil core.


3601.118
33.  Contact strip
Contact strip held by 1 screw 4000.250.

4000.250
34.  Screw





3503.054
35.  Tube

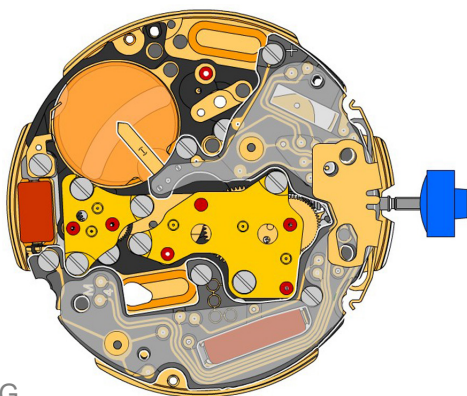
3503.054
36.  Tube

3603.034
37.  Battery insulator





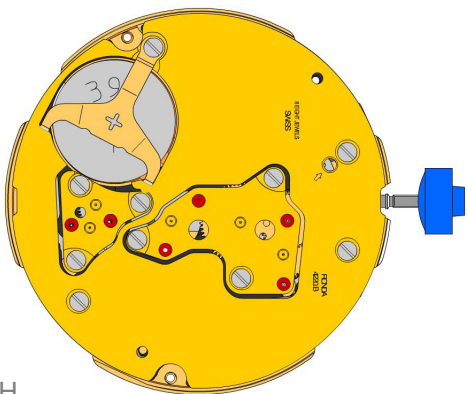



G










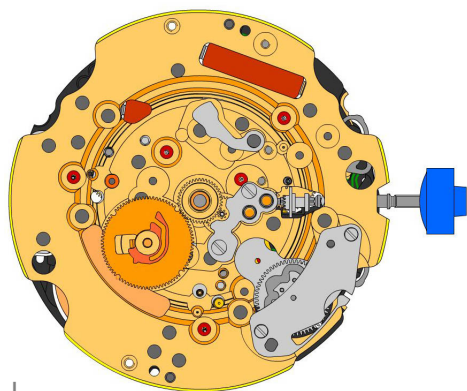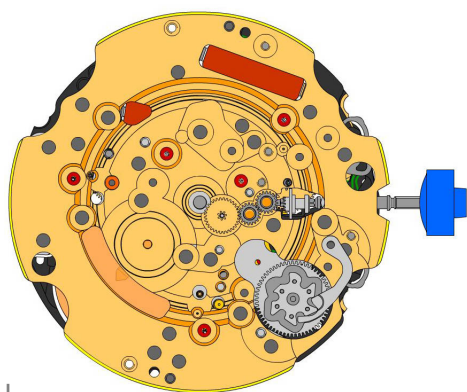




3612.144.4220 38.		Electronic module Electronic module held by 5 screws 4000.248. Electronic measurements may be realised now.
4000.248 39.		Screw
3603.069 40.		Circuit insulator
3601.107.G 41.		Pusher contact spring




H


2130.138.G.M01.4220B 42.		Electronic module cover Electronic module cover held by 3 screws 4000.250.
3600.010.HGF 43.		Battery 395
3601.109.G 44.		Bridle + Bridle held by 1 screw 4000.250.
4000.250 45.		Screw



2000.574.G 46.		Main plate
3004.164 47.		Setting wheel
3004.164 48.		Setting wheel
3007.054.CO 49.		Minute wheel
2130.143 50.		Minute train bridge Minute train bridge held by 2 screws 4000.305.
4000.305 51.		Screw
3004.223 52.		Tens indicator driving wheel Parts 2030.017.CO, 3004.223 and 3500.059 must be exchanged together. The short tooth of the tens indicator driving wheel must point to the center of the movement.
3500.059 53.		Tens jumper Parts 2030.017.CO, 3004.223 and 3500.059 must be exchanged together.
2130.142 54.		Tens jumper maintaining plate Tens jumper maintaining plate held by 2 screws 4000.306. Tensioning the spring arm.
4010.306 55.		Screw
3301.242 56.		Hour wheel (Fig.2)
3315.016 57.		Friction spring
3004.224.CO 58.		Date indicator driving wheel
3500.049 59.		Date jumper

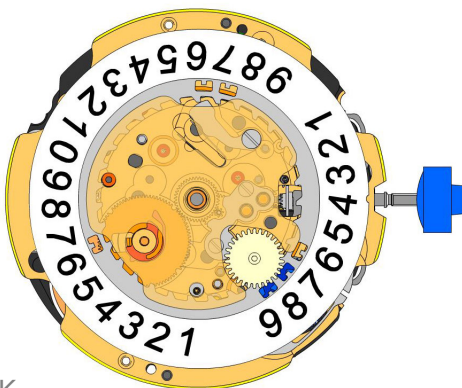

K

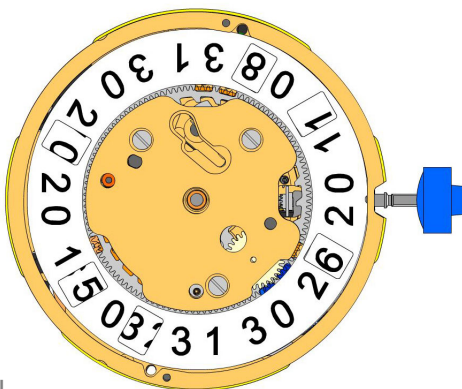

L

3504.214.AD.1.A
60.



Units indicator (standard)
Nick of the indicator at 3 o'clock.

3147.054
61.



Tens intermediate wheel

2130.141
62.



Date indicator maintaining plate
Date indicator maintaining plate held by 1 screw 4000.250.

3905.070
63.



Date jumper spring
Insert the date jumper spring in the provided opening.

3504.215.AD.1.A
64.



Tens indicator (standard)
Nick of the indicator at 3 o'clock

2130.140.G
65.



Date mechanism maintaining plate
Date mechanism maintaining plate held by 2 screws 4000.250.

4000.250
66.



Screw

3506.072.G
67.



Dial support

8200
68.



Moebius 8200

9014
69.



Moebius 9014

124
70.




Jismaa 124


9020
71.



Moebius 9020

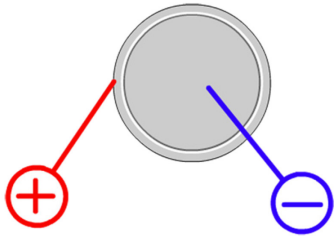


Battery	395
Voltage	1.55 V

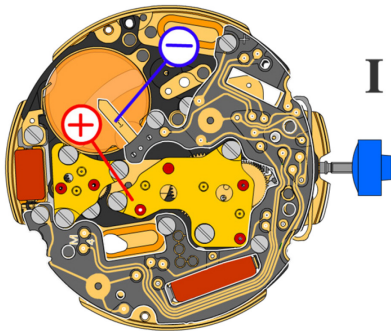


*Setting stem in position I, calendar not in gear,
60 s measuring interval for rate and consumption:*

Typical consumption	1.32 μA
Maximal consumption	1.65 μA
Instantaneous rate	-10s/M. .. +20s/M.
Lower working voltage limit	1.30 V

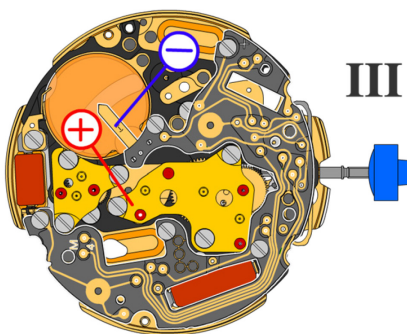

Setting stem in position III, 60 s measuring interval:


Typical consumption	0.10 μA
Maximal consumption	0.30 μA

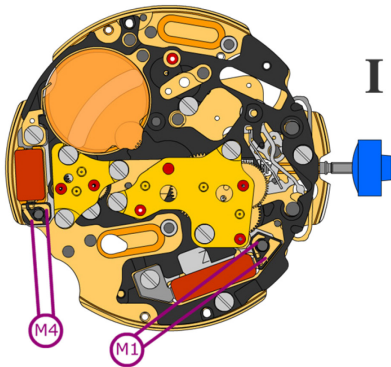


Coil resistance M1

1.90 k Ω .. 2.10 k Ω

Coil resistance M4

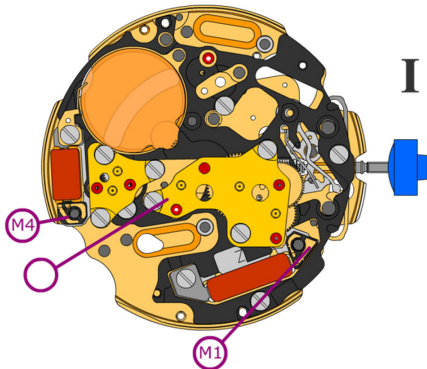2.20 k Ω .. 2.40 k Ω


Coil isolation M1/M4

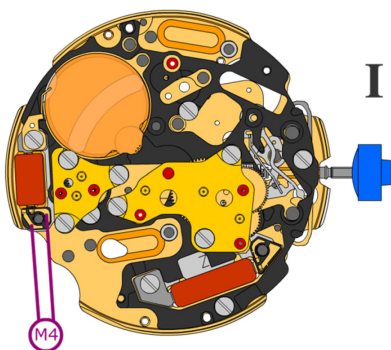 ∞ k Ω

Signal generator (4.9 ms, 8 Hz):

Lower working voltage limit M4

1.30 V