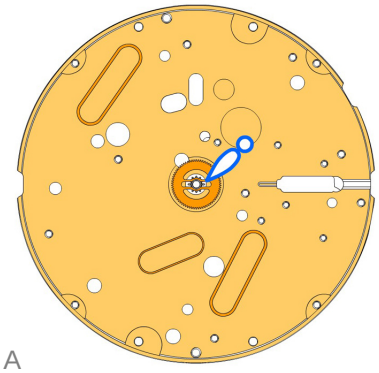

A

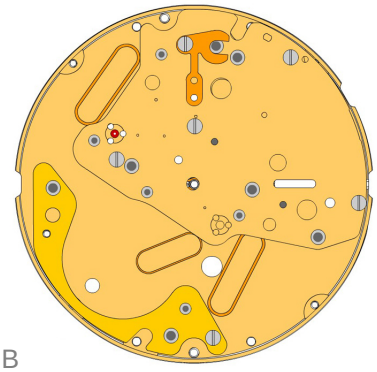

B

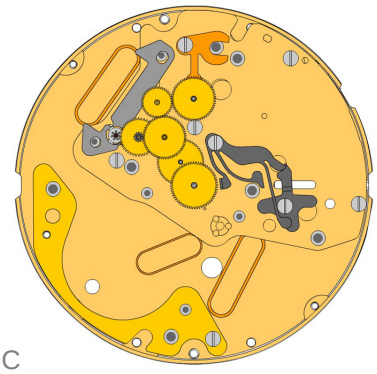

C

2000.669.G 1.		Main plate
3305.363.CO 2.		Cannon pinion with driver B (Aig.1)
2030.028.CO 3.		Centre bridge Centre bridge held by 4 screws 4000.250.
4000.250 4.		Screw
3406.039 5.		Sliding attachement Sliding attachement held by 1 screw 4000.250.
2130.181.CO 6.		Combined maintaining plate Combined maintaining plate held by 1 screw 4000.250.
4000.250 7.		Screw
3016.028 8.		Lever for setting lever Lever for setting lever held by 1 screw 4000.249.
4000.249 9.		Screw
3016.027 10.		Stop lever Stop lever held by 1 screw 4000.249.
4000.249 11.		Screw
3622.044 12.		Stator
3715.105.RK 13.		Rotor
3147.060.CO 14.		Intermediate wheel
3122.070.CO 15.		Third wheel
3136.174.CO 16.		Centre second wheel (Aig.1)
3004.203.CO 17.		Seconde intermediate wheel
3136.182.CO 18.		Small second wheel axle
3136.173.CO 19.		Centre second wheel (Aig.1)

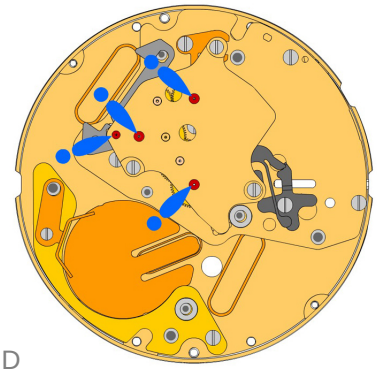

D

2020.170.G 20.		Train wheel bridge Train wheel bridge held by 3 screws 4000.250.
4000.244 21.		Screws
3603.080 22.		Battery insulator
3601.120.G 23.		Battery clamp + Battery clamp held by 1 screw 4000.248.
4000.248 24.		Screw
3503.071 25.		Tube

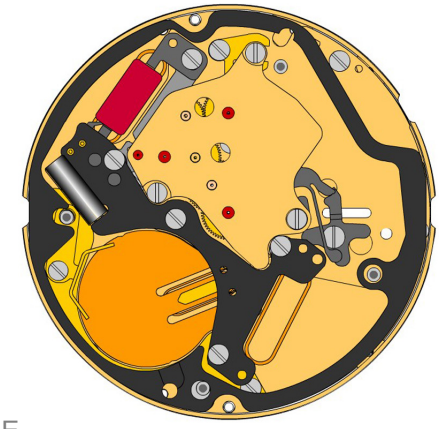

E

3612.196 26.		Electronic module Electronic module held by 5 screws 4000.250.
4000.250 27.		Screw
3603.081 28.		Spacer
2130.183.G.7004P 29.		Electronic module cover Electronic module cover held by 4 screws 4000.244.
4000.244 30.		Screws
3600.032.HGF 31.		Battery 381

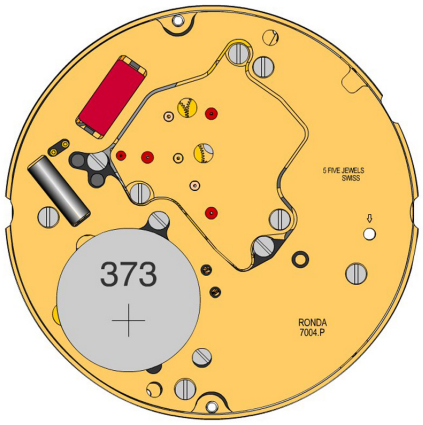

F

2000.669.G
32.

Main plate

3017.054.CO
33.

Setting lever

3905.063
34.

Setting lever jumper (3 positions)
Setting lever jumper held by 1 screw 4000.250. Tensioning the spring arm.

4000.282
35.

Screw

3001.061.FI
36.

Sliding pinion

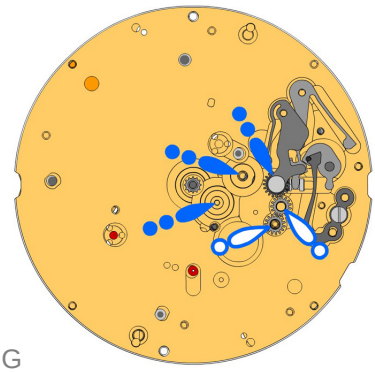

G

3015.077
37.

Yoke (3 positions)
Tensioning the spring arm.

3004.200
38.

Corrector setting wheel

3004.200
39.

Corrector setting wheel

3015.078.CO
40.

Rocking bar (3 positions)
Tensioning the spring arm.

2130.194
41.

Setting mechanism cover
Setting mechanism cover held by 4 screws 4000.305.

4000.305
42.

Screw

3000.194.CO
43.

Setting stem

3004.204
44.

Intermediate setting wheel

3007.079.CO
45.

Minute wheel

2130.185
46.

Minute train bridge
Minute train bridge held by 1 screw 4000.278.

4000.278
47.

Screw

3301.296.CO
48.

Hour wheel (Aig.1)

3147.066.CO
49.

Date corrector setting wheel

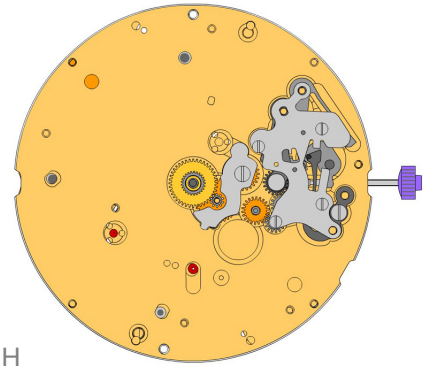

H

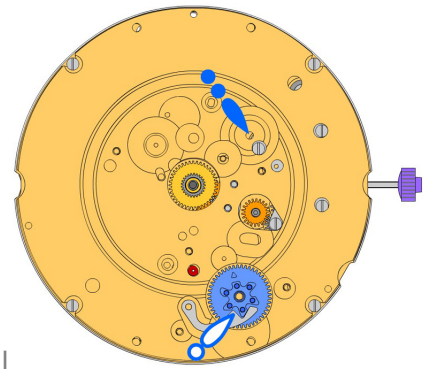

I

2000.672.G
50.

Main plate retro
Main plate retro held by 4 screws 4000.248.

4000.248
51.

Screw

3004.209
52.

Tens indicator driving wheel
The short tooth of the tens indicator driving wheel must point to the center of the movement. Parts 3004.209 and 3500.073 must be exchanged together.

3500.073
53.

Tens jumper
Parts 3004.209 and 3500.073 must be exchanged together.

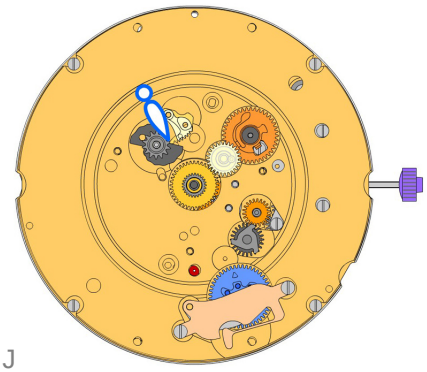

J

2130.187
54.

Tens jumper maintaining plate
Tens jumper maintaining plate held by 2 screws 4000.279. Tensioning the spring arm.

4000.279
55.

Screw

3004.208.CO
56.

Date indicator driving wheel

3147.061
57.

Intermediate date wheel

3404.006.CO
58.

Day cam (12h)
Place parts as shown on graphics.

3406.032
59.

Day rack

3406.031
60.

Day rack lever

3507.059.CO
61.

Date corrector wheel

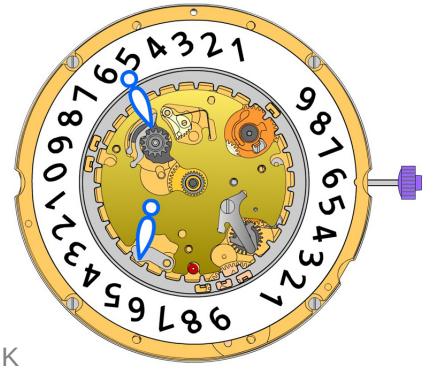

K

2130.191
62.

Date indicator plate

3905.068
63.

Date corrector spring
Date corrector spring held by 1 screw 4000.244.

3905.066
64.

Day rack lever spring
Tensioning the spring arm.

3500.069
65.

Day jumper
Tensioning the spring arm.

3500.068
66.

Date jumper

3504.234.A6.1.A
67.

Units indicator (standard)
Nick of the indicator at 3 o`clock.

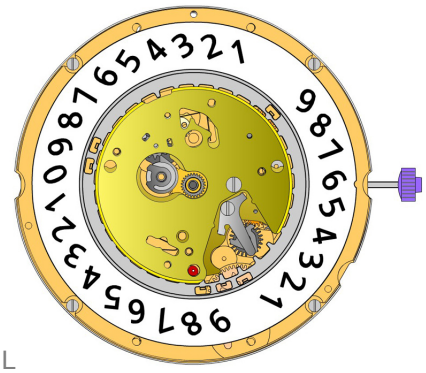

L

2130.192 68.		Date indicator maintaining plate Date indicator maintaining plate held by 1 screw 4000.250.
4000.250 69.		Screw
3905.064 70.		Date jumper spring Insert the date jumper spring in the provided opening.
3907.047 71.		Day finger flange Stem pos III: Turn crown forwards until the date jumps. Stem pos II: Move the date until the nick is at 3 o`clock.
3004.211 72.		Day finger Position the end of the teeth against the day came pinion while turning softly in counterclockwise direction.

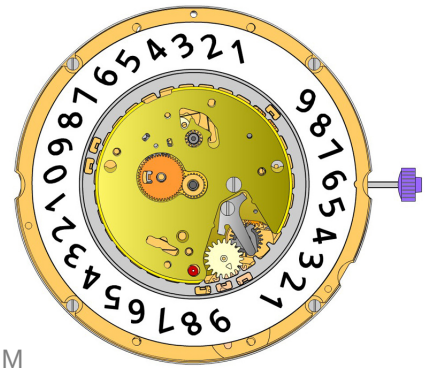

M

3004.212 73.		Days driving wheel Insert the tooth of the wheel in the flange gap, while turning softly in counterclockwise direction to ensure correct position of the day finger.
3401.082.FI 74.		Day indicator pinion
3147.062 75.		Tens intermediate wheel Place the arrow of the tens intermediate wheel in front of the half tooth of the tens indicator driving wheel.
3315.003 76.		Friction spring

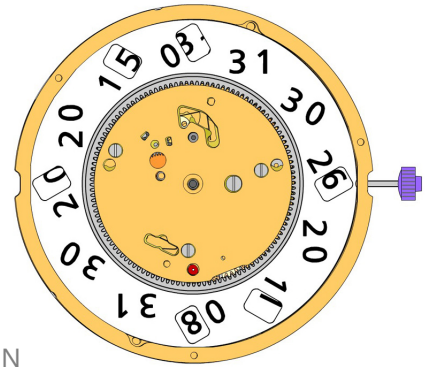

N

3504.236.A6.1.A 77.		Tens indicator (standard) Nick of the indicator at 3 o`clock.
2130.193.G 78.		Date mecanism maintaining plate Date mecanism maintaining plate held by 3 screws 4000.320.
4000.320 79.		Screw
3506.077.G 80.		Intermediate dial support Polished version first.
3506.076.G 81.		Dial support

8200 82.		Moebius 8200
9014 83.		Moebius 9014
124 84.		Jismaa 124
9020 85.		Moebius 9020

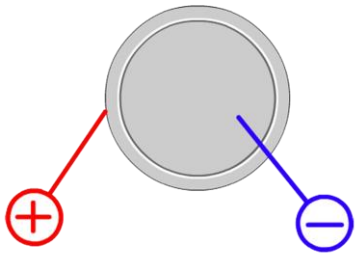

Battery	**381**
Voltage	**1.55 V**

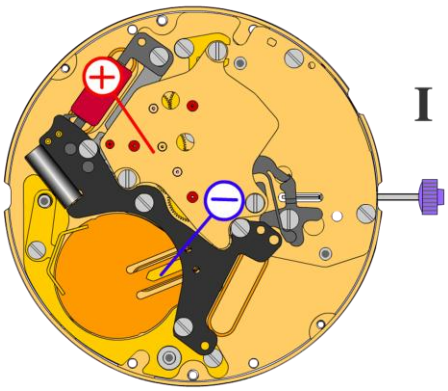

Setting stem in position I, calendar not in gear,
60 s measuring interval for rate and consumption:

Typical consumption	***1.43 µA***
Maximal consumption	***3.10 µA***
Instantaneous rate	**-10s/M. .. +20s/M.**
Lower working voltage limit	**1.30 V**

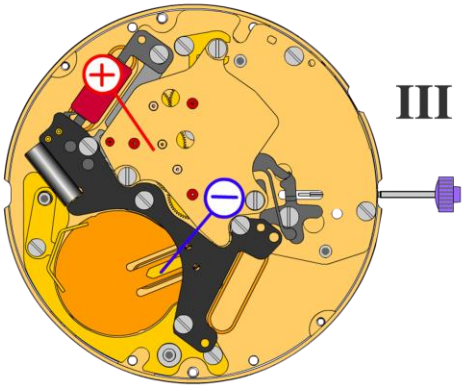

Setting stem in position III, 60 s measuring interval:

Typical consumption	***0.10 µA***
Maximal consumption	***0.30 µA***