


Catalog No. C040-1~C040-2

Catalog No. C046-1~C046-2

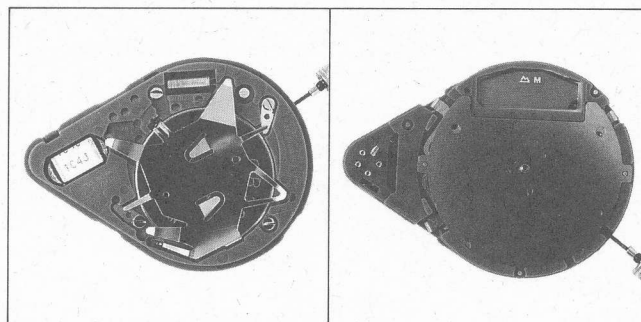


C040/C046-1
(Catalog No.)


C040/C046-2
(Catalog No.)

C040	C046
● Combination watch with pressure sensor [Analog] ● Hour/Minute/Second [Digital] ● Time ● Calendar ● Alarm ● Altimeter -300 m ~ 5,000 m ● Altitude memory 7 points ● Barometer (500 ~ 1,050 mbar) ● Stop watch (Climbing time) ● Climbing time memory	● Combination watch with pressure sensor [Analog] ● Hour/Minute/Second [Digital] ● Time ● Calendar ● Alarm ● Altimeter -980 ft ~ 17,000 ft ● Altitude memory 4 points ● Barometer (500 ~ 1,050 mbar) ● Stop watch ● Climbing time memory
Thickness: 4.8mm	

Size	30.8 x 41.8mm
Oscillation per Second	32,768Hz

Catalog No. C040-1
Catalog No. C046-1

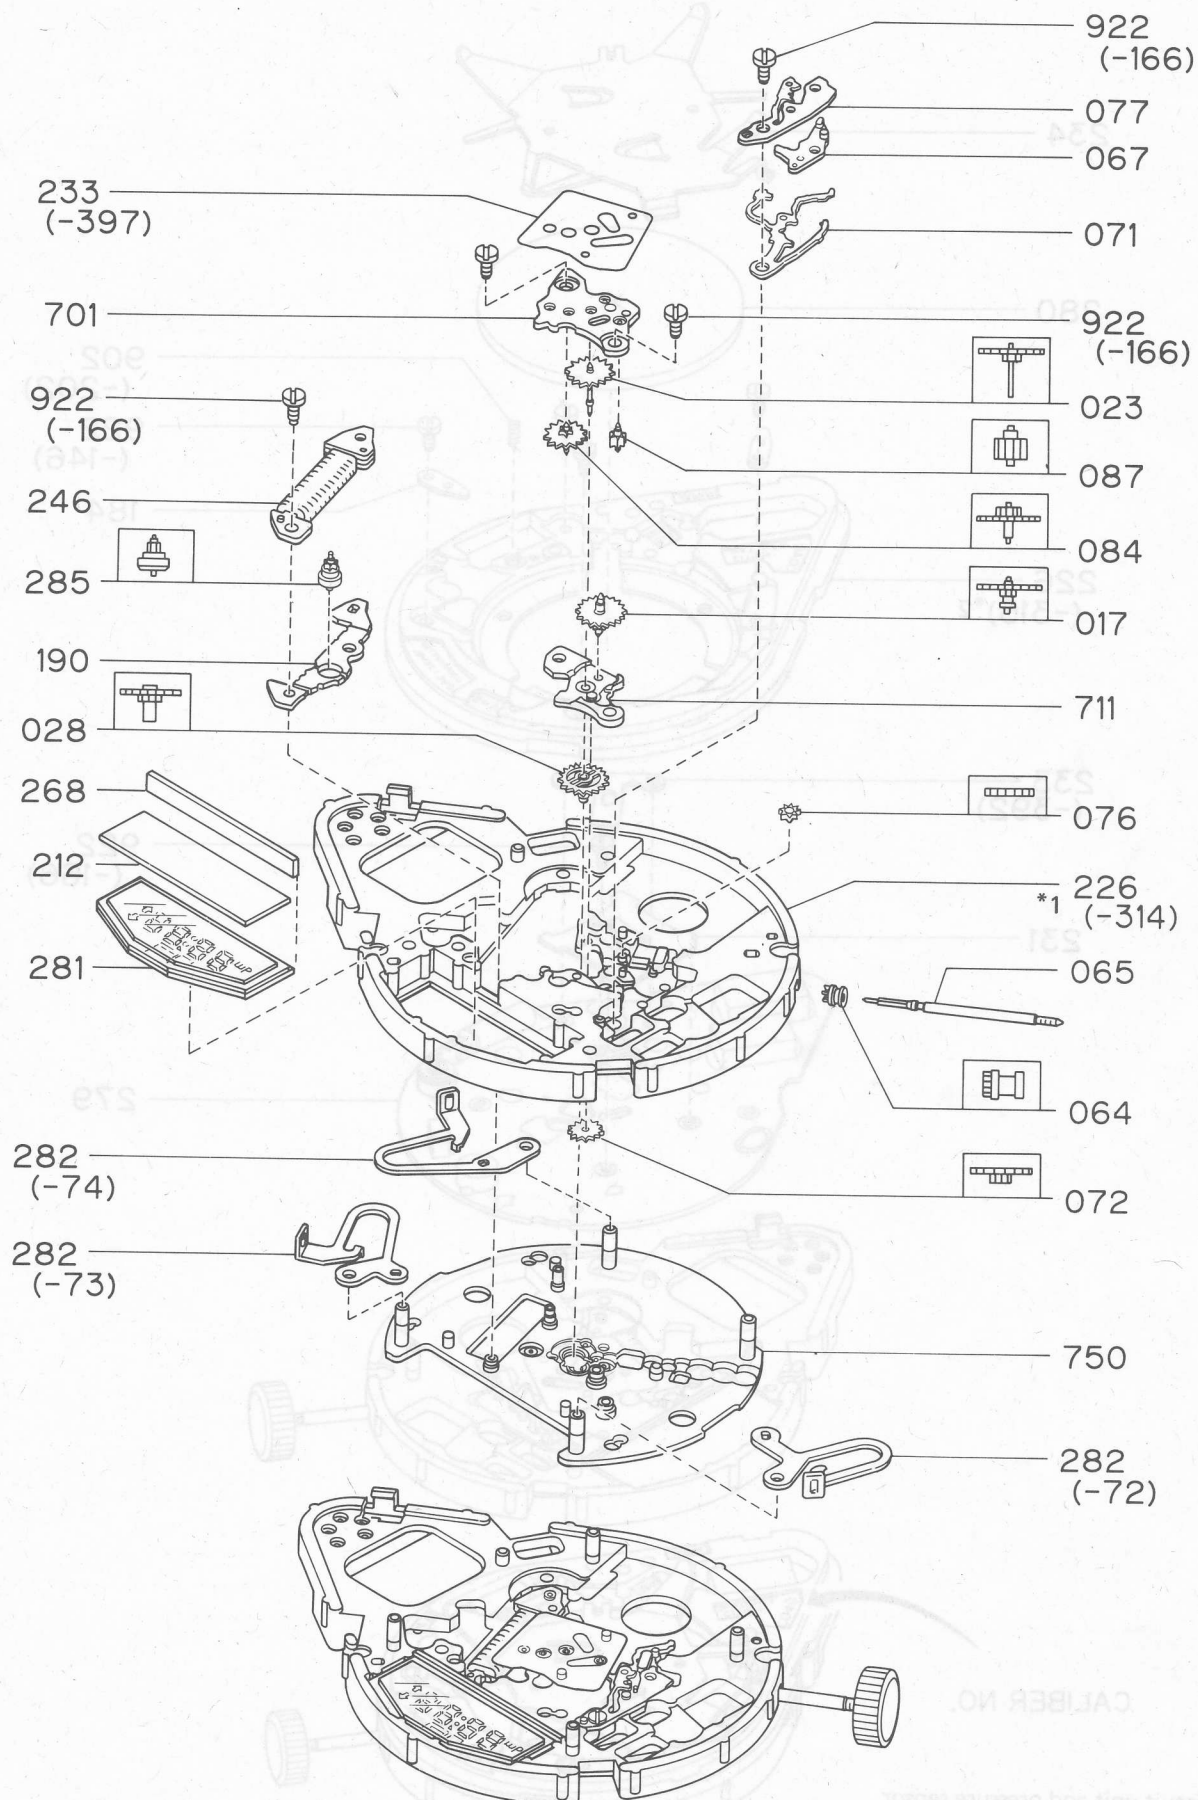

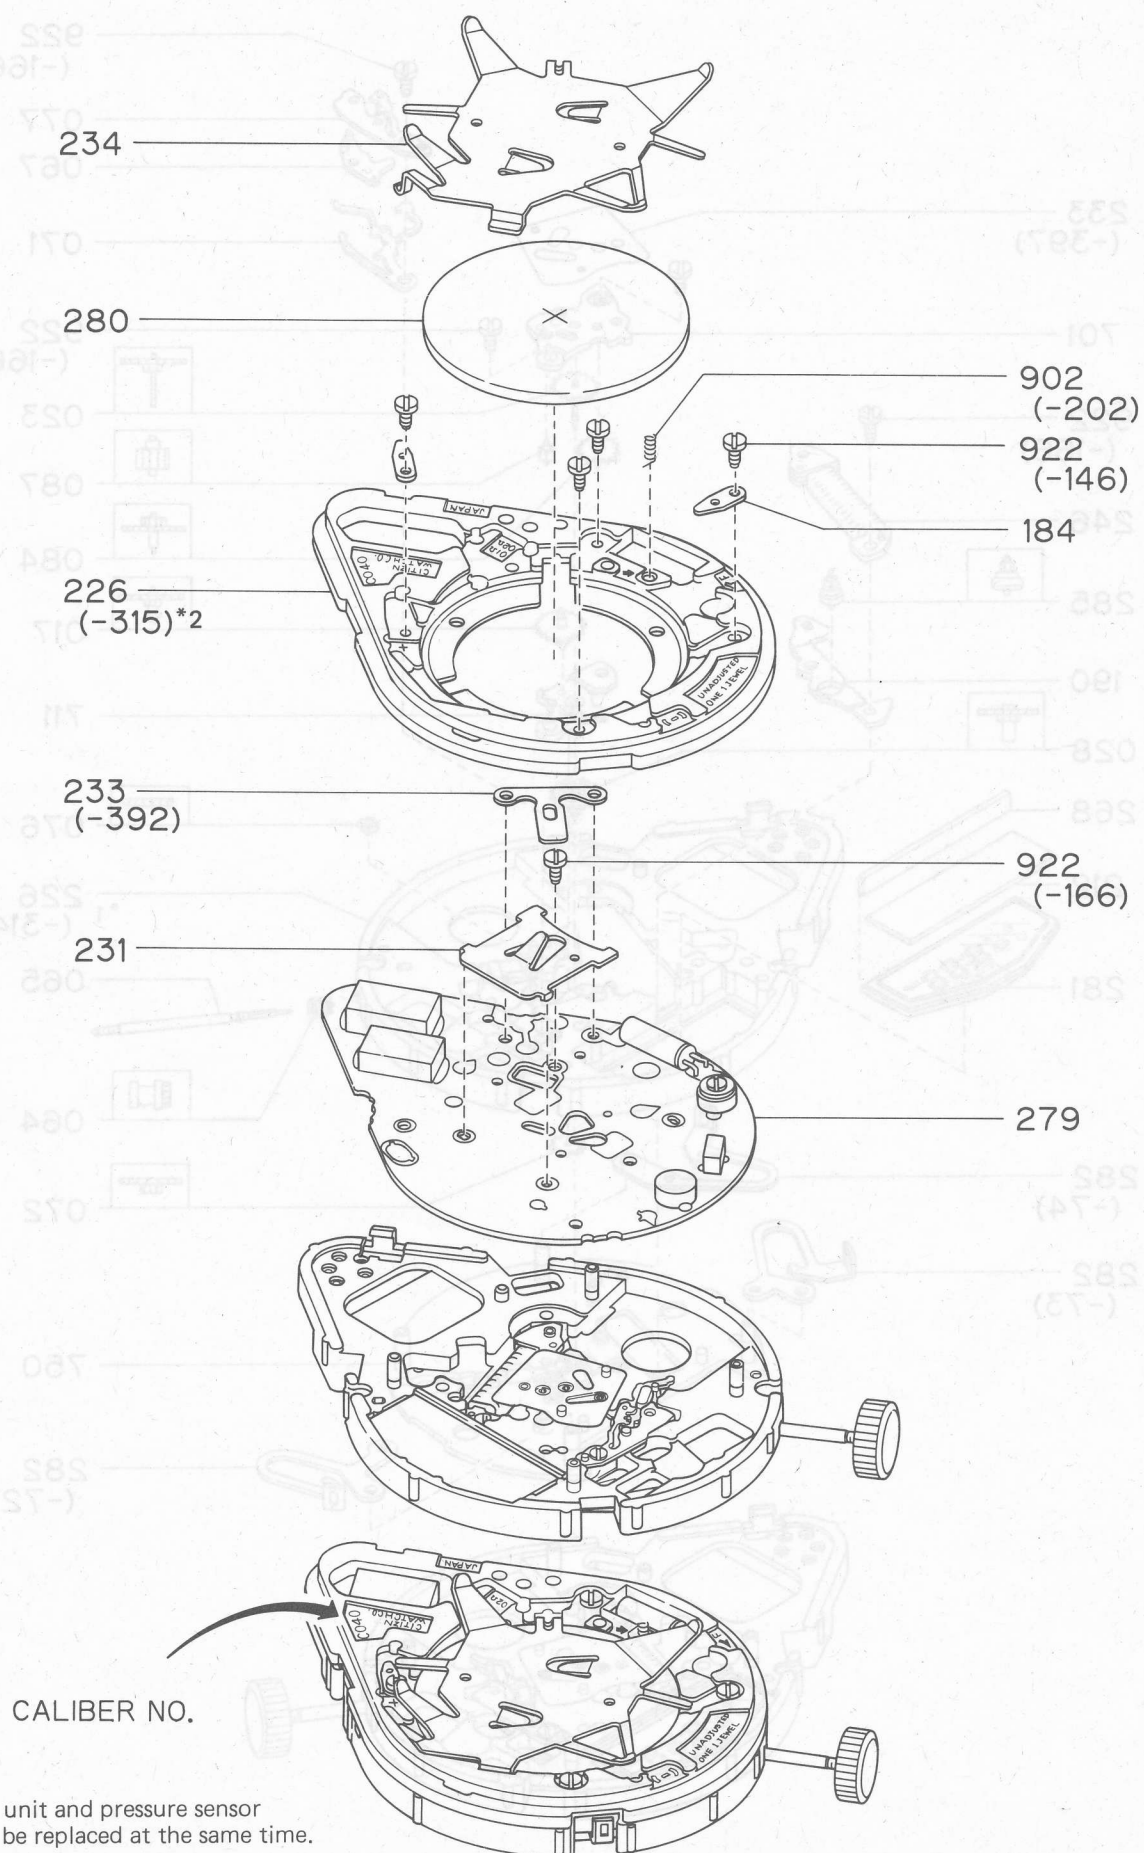


Catalog No. C040-1
Catalog No. C046-1


Part No.	Name of parts	Caliber No.	
		C040	C046
		01	01
017	Third wheel and pinion	124	—○
023	Fourth wheel and pinion	221	—○
028	Cannon pinion with driving wheel	131	—○
064	Cluch wheel	85	—○
065	Setting stem (*3)	397	—○
065	Setting stem (*4)		428
067	Setting lever	177	—○
071	Yoke	118	—○
072	Minute wheel and pinion	94	—○
076	Setting wheel	54	—○
077	Setting lever spring	114	—○
084	Fifth wheel and pinion	50	—○
087	Intermediate minute wheel	65	—○
184	Plus connector plate	137	—○
190	Stator	86	—○
212	Spacer for LC display panel	166	—○
226	LC display panel supporter (*1)	314	—○
226	Supporter for plate complete (*2)	315	316
231	Power cell connector spring	128	—○
233	Power cell insulator	392	—○
233	Circuit insulator	397	—○
234	Power cell strap	408	—○
246	Coil unit	132	—○
268	LC display panel connection rubber	161	—○
279	Unit of electronic circuit	621	635
280	Power cell	206	—○
281	LC display panel (Silver color)	A67	A79
	(Gold color)	A81	A82
282	Switch actuating spring 1	72	—○
282	Switch actuating spring 2	73	—○
282	Switch actuating spring 3	74	—○
285	Rotor	91	—○
701	Train wheel bridge	601	—○
711	Center wheel cock	136	—○
902	Buzzer coil spring	202	—○
922	Screw	146	—○
922	Screw	166	—○
922	Screw	—○	—○
922	Screw	—○	—○
750	Plate complete	A08	—○

* Circuit unit and pressure sensor
should be replaced at the same time.


(*3)
065-397



(*4)
065-428




281-A67 (Silver)/281-A81 (Gold)

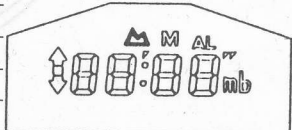


Indicator unit: meter
(with mark ▲)
For mountain climbing

281-A79 (Silver)/281-A82 (Gold)

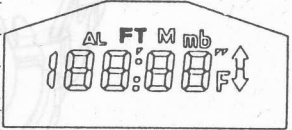

Indicator unit: feet
(with mark ▲)
For mountain climbing

281-A90

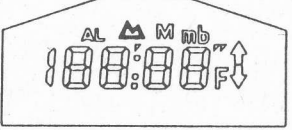

Indicator unit: feet
(with mark FT)
For sky sports

Pressure sensor

902
(-214)

186

078

075

Catalog No. C040-2
Catalog No. C046-2

[illegible]