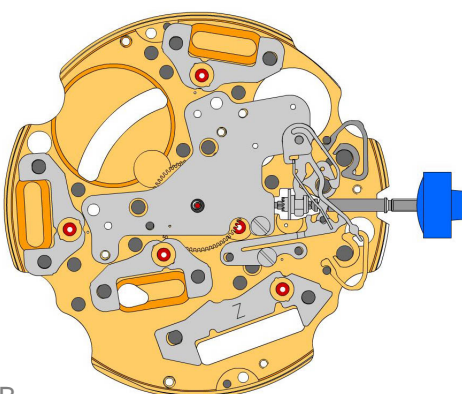A

B

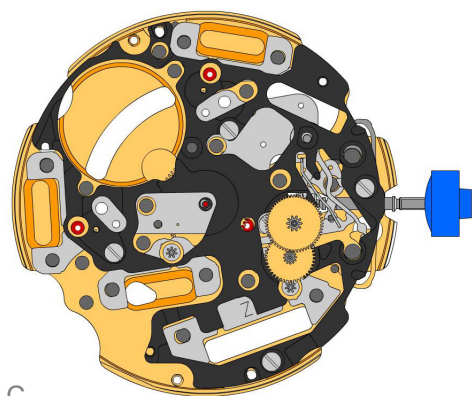| | | |
|---|---|---|
| 2000.574.G<br>1. | | Main plate |
| 3305.275.CO<br>2. | | Cannon pinion with driver (Aig.1) |
| 2030.039.CO<br>3. | | Centre bridge<br>Centre bridge held by 1 screw 4000.250. |
| 4000.250<br>4. | | Screw |
| 3001.055.FI<br>5. | | Sliding pinion |
| 3000.177.CO<br>6. | | Setting stem |
| 3017.049<br>7. | | Setting lever |
| 3905.049<br>8. | | Setting lever jumper (3 positions)<br>Setting lever jumper held by 1 screw 4000.250. |
| 4000.250<br>9. | | Screw |
| 3015.081<br>10. | | Yoke (3 positions)<br>Parts 3015.081 and 3905.067 must be exchanged together. |
| 3905.067<br>11. | | Yoke spring<br>Tensioning the spring arm. |
| 3406.030<br>12. | | Pusher jumper B<br>Put the grey jumper between the two posts on the further side. |
| 3406.038<br>13. | | Pusher jumper A<br>Put the yellow jumper between the two posts on the closer side. |
| 3622.040<br>14. | | Stator<br>Mark |Z| on stator. |
| 3622.039<br>15. | | Stator (counter 6h, 9h, chrono) |
| 3622.039<br>16. | | Stator (counter 6h, 9h, chrono) |
| 3622.039<br>17. | | Stator (counter 6h, 9h, chrono) |

| | | | |
|---|---|---|---|
| 3603.079<br>18. | | Plastic bracket<br>Plastic bracket held by 4 screws 4000.250. | |
| 4000.250<br>19. | | Screw | |
| 3715.094.RK<br>20. | | Rotor | |
| 3715.094.RK<br>21. | | Rotor | |
| 3147.046.CO<br>22. | | Intermediate wheel | |
| 3136.142.CO<br>23. | | Second wheel (long) | |

C
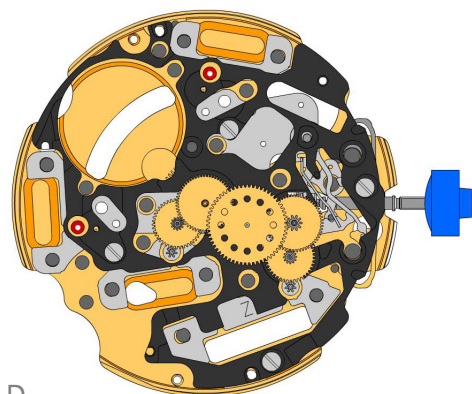
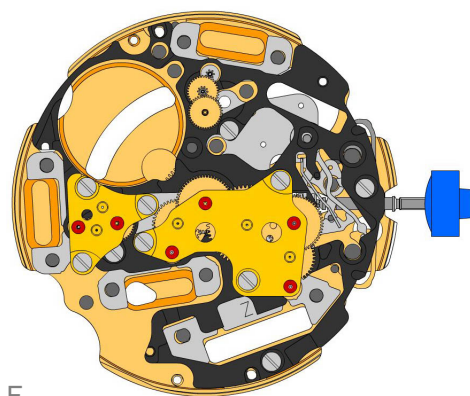| | | | |
|---|---|---|---|
| 3147.047.CO<br>24. | | Intermediate wheel (chrono) | |
| 3136.143.CO<br>25. | | Chronograph wheel (Aig.1) | |
| 3122.056.CO<br>26. | | Third wheel | |

D
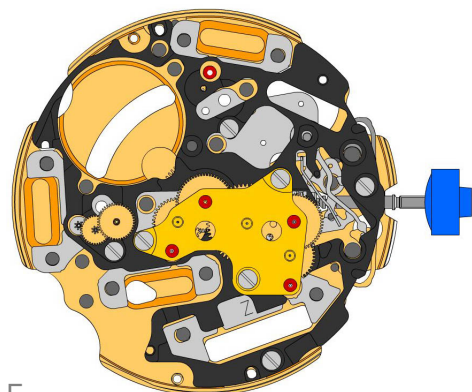
| | | | |
|---|---|---|---|
| 2020.148.G<br>27. | | Train wheel bridge<br>Train wheel bridge held by 3 screws 4000.250. | |
| 4000.250<br>28. | | Screw | |
| 3715.095.RK<br>29. | | Rotor | |
| 3147.048.CO<br>30. | | Intermediate wheel (counter) | |
| 3402.006.CO<br>31. | | Minute counting wheel | |

E

F

| 32. | 2020.149.G | | Counter train wheel bridge<br>Counter train wheel bridge held by 3 screws 4000.250. |
| 33. | 4000.250 | | Screw |
| 34. | 3715.095.RK | | Rotor |
| 35. | 3147.053.CO | | Intermediate wheel (counter 1/10sec) |
| 36. | 3402.016.CO | | Counting wheel 1/10 sec |

G

| 37. | 2020.149.G | | Counter train wheel bridge<br>Counter train wheel bridge held by 3 screws 4000.250. |
| 38. | 4000.250 | | Screw |
| 39. | 3621.053.RK | | Coil<br>Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250. |
| 40. | 3621.054.RK | | Coil (counter 9h, chrono)<br>Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250. |
| 41. | 3621.054.RK | | Coil (counter 9h, chrono)<br>Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250. |
| 42. | 3621.055.RK | | Coil (counter 6h)<br>Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250. |
| 43. | 4000.250 | | Screw |

H
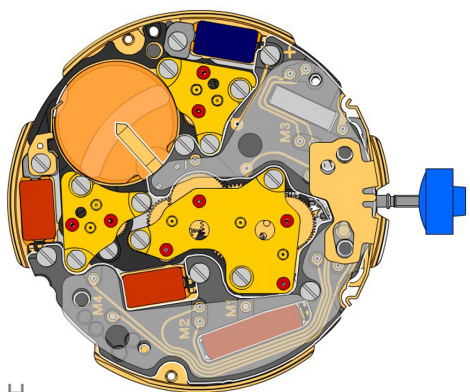
| 44. | 3601.118 | | Contact strip<br>Contact strip held by 1 screw 4000.250. |
| 45. | 4000.250 | | Screw |
| 46. | 3603.034 | | Battery insulator |
| 47. | 3612.144.5040 | | Electronic module<br>Electronic module held by 5 screws 4000.248. Electronic measurements may be realised now. |
| 48. | 4000.248 | | Screw |
| 49. | 3603.069 | | Circuit insulator |
| 50. | 3601.107.G | | Pusher contact spring |

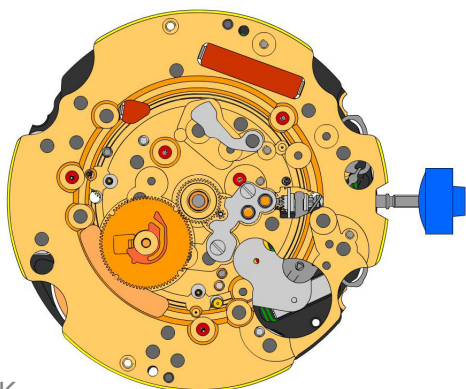| | | |
|---|---|---|
| 2130.137.G.M01.5040D 51. | | **Electronic module cover** Electronic module cover held by 3 screws 4000.250. |
| 3600.010.HGF 52. | | **Battery 395** |
| 3601.109.G 53. | | **Bridle +** Bridle held by 1 screw 4000.250. |
| 4000.250 54. | | **Screw** |
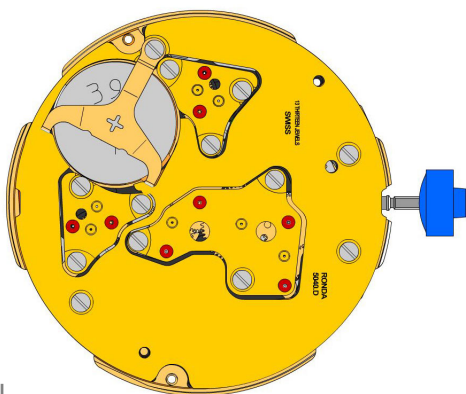
J

K
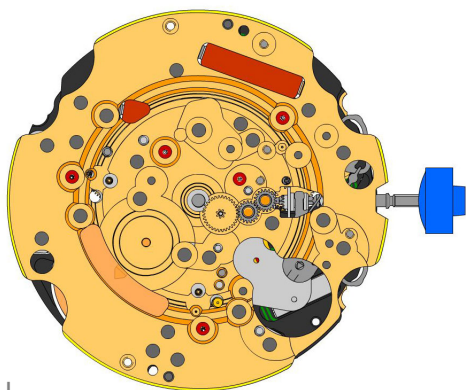
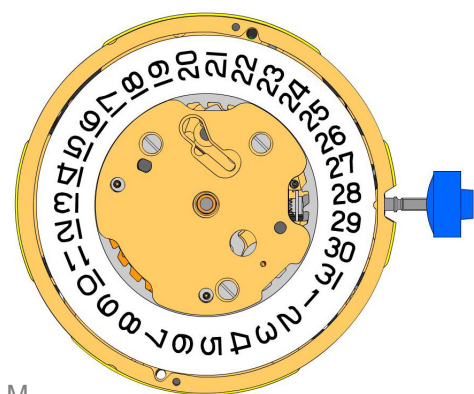| | | |
|---|---|---|
| 2000.574.G 55. | | Main plate |
| 3004.164 56. | | Setting wheel |
| 3004.164 57. | | Setting wheel |
| 3007.054.CO 58. | | Minute wheel |

| | | |
|---|---|---|
| 2130.143 59. | | Minute train bridge<br>Minute train bridge held by 2 screws 4000.305. |
| 4000.305 60. | | Screw |
| 3301.241 61. | | Hour wheel (Aig.1) |
| 3315.016 62. | | Friction spring |
| 3004.224.CO 63. | | Date indicator driving wheel |
| 3500.049 64. | | Date jumper |
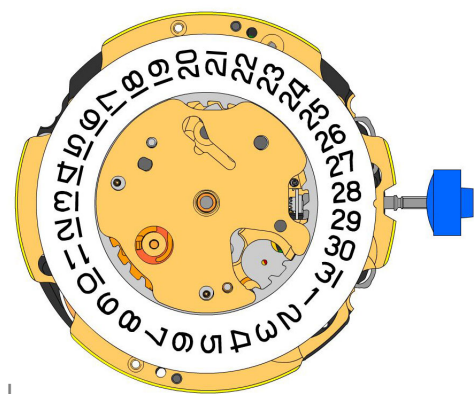
L

M

| | | |
|---|---|---|
| 3504.208.AB.1.A 65. | | Date indicator (standard) Nick of the indicator at 3 o`clock. |
| 2130.141 66. | | Date indicator maintaining plate Date indicator maintaining plate held by 1 screw 4000.250. |
| 3905.070 67. | | Date jumper spring Insert the date jumper spring in the provided opening. |
| 2130.140.G 68. | | Date mechanism maintaining plate Date mechanism maintaining plate held by 2 screws 4000.250. |
| 4000.250 69. | | Screw |
| 3506.072.G 70. | | Dial support |
| 8200 71. | | Moebius 8200 |
| 9014 72. | | Moebius 9014 |
| 124 73. | | Jismaa 124 |
| 9020 74. | | Moebius 9020 |

| Battery | **395** |
|---|---|
| Voltage | **1.55 V** |
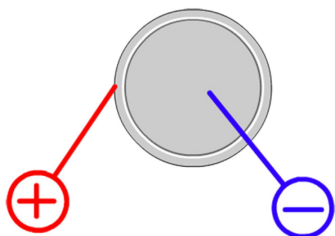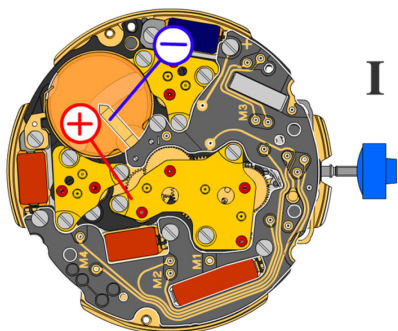
*Setting stem in position I, calendar not in gear,*
*60 s measuring interval for rate and consumption:*

| | |
|---|---|
| Typical consumption | *1.32 µA* |
| Maximal consumption | *1.65 µA* |
| Instantaneous rate | **-10s/M. .. +20s/M.** |
| Lower working voltage limit | **1.30 V** |
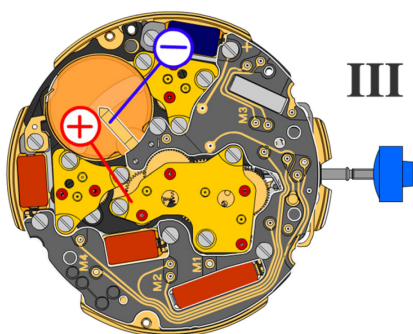
*Setting stem in position III, 60 s measuring interval:*

| | |
|---|---|
| Typical consumption | *0.10 µA* |
| Maximal consumption | *0.30 µA* |

| | |
|---|---|
| Coil resistance M1 | **1.90 kΩ .. 2.10 kΩ** |
| Coil resistance M2 | **2.20 kΩ .. 2.40 kΩ** |
| Coil resistance M3 | **2.20 kΩ .. 2.40 kΩ** |
| Coil resistance M4 | **2.20 kΩ .. 2.40 kΩ** |

| | |
|---|---|
| Coil isolation M1/M2/M3/M4 | **∞ kΩ** |
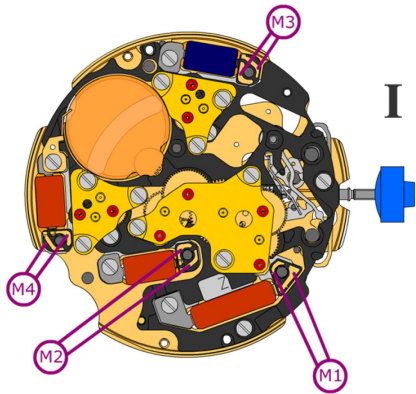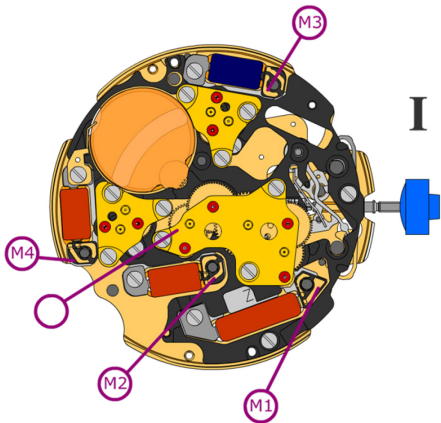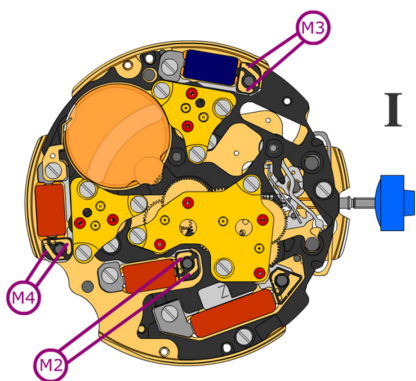
*Signal generator (4.9 ms, 8 Hz):*

| | |
|---|---|
| Lower working voltage limit M2/M3/M4 | **1.30 V** |