





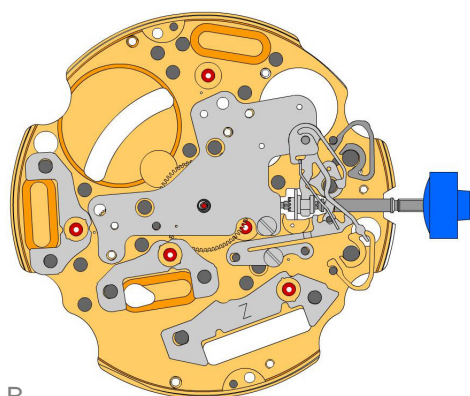


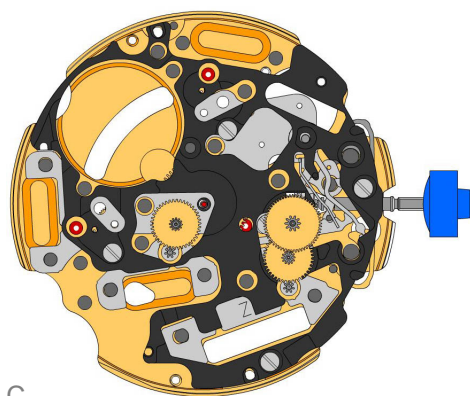


A




B


2000.574.G 1.		Main plate
3305.282.CO 2.		Cannon pinion with driver (Aig.2)
3301.244 3.		Hour wheel (counter 24h)
2030.017.CO 4.		Centre bridge Centre bridge held by 1 screw 4000.250. Parts 2030.017.CO, 3004.223 and 3500.059 must be exchanged together.
4000.250 5.		Screw
3001.055.FI 6.		Sliding pinion
3000.177.CO 7.		Setting stem
3017.049 8.		Setting lever
3905.049 9.		Setting lever jumper (3 positions) Setting lever jumper held by 1 screw 4000.250.
4000.250 10.		Screw
3015.081 11.		Yoke (3 positions) Parts 3015.081 and 3905.067 must be exchanged together.
3905.067 12.		Yoke spring Tensioning the spring arm. Parts 3015.081 and 3905.067 must be exchanged together.
3406.030 13.		Pusher jumper B Put the grey jumper between the two posts on the further side.
3406.038 14.		Pusher jumper A Put the yellow jumper between the two posts on the closer side.
3622.040 15.		Stator Mark [Z] on stator.
3622.039 16.		Stator (counter 6h, 9h, chrono)
3622.039 17.		Stator (counter 6h, 9h, chrono)



C

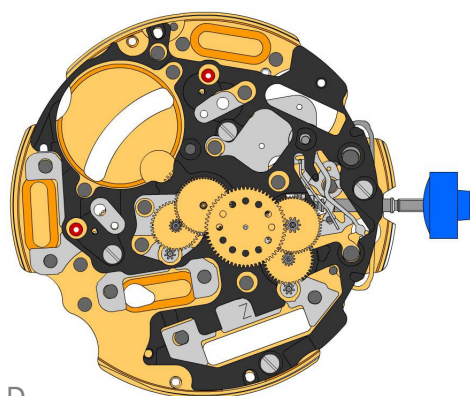

D

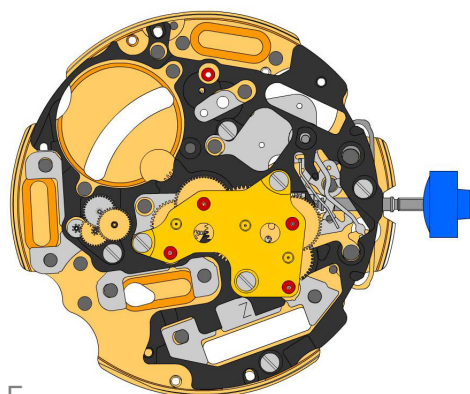

E

3603.079
18.  Plastic bracket
Plastic bracket held by 4 screws 4000.250.


4000.250
19.  Screw


3715.094.RK
20.  Rotor

3715.094.RK
21.  Rotor


3147.046.CO
22.  Intermediate wheel

3136.142.CO
23.  Second wheel (long)

3147.047.CO
24.  Intermediate wheel (chrono)

3136.144.CO
25.  Chronograph wheel (Aig.2)

3122.056.CO
26.  Third wheel


2020.148.G
27.  Train wheel bridge
Train wheel bridge held by 3 screws 4000.250.


4000.250
28.  Screw

3715.095.RK
29.  Rotor


3147.048.CO
30.  Intermediate wheel (counter)

3007.056.CO
31.  Minute wheel (counter 24h)


3402.008.CO
32.  Minute counting wheel (24h)

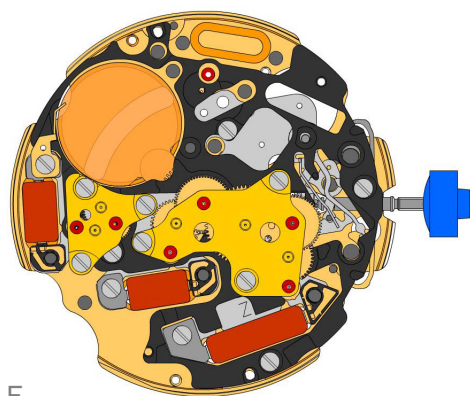

F

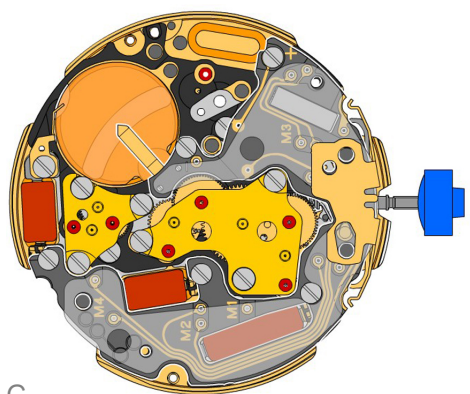

G

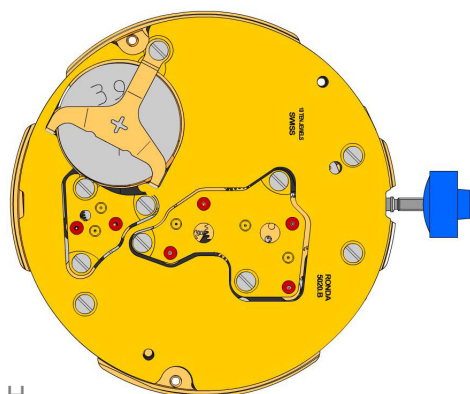

H

2020.149.G
33.



Counter train wheel bridge
Counter train wheel bridge held by 3 screws 4000.250.

4000.250
34.



Screw

3621.053.RK
35.



Coil
Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.

3621.054.RK
36.



Coil (counter 9h, chrono)
Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.

3621.054.RK
37.



Coil (counter 9h, chrono)
Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.

3601.118
38.



Contact strip
Contact strip held by 1 screw 4000.250.

4000.250
39.



Screw

3603.034
40.



Battery insulator

3503.054
41.



Tube

3612.144.5020
42.



Electronic module
Electronic module tenue par 5 vis 4000.248. Electronic measurements may be realised now.

4000.248
43.



Screw

3603.069
44.



Circuit insulator

3601.107.G
45.



Pusher contact spring

2130.138.G.M01.5020B
46.



Electronic module cover
Electronic module cover held by 3 screws 4000.250.

3600.010.HGF
47.



Battery 395

3601.109.G
48.














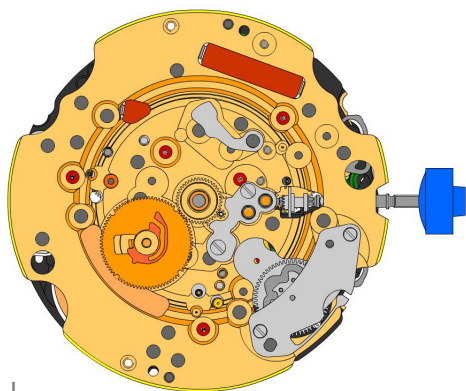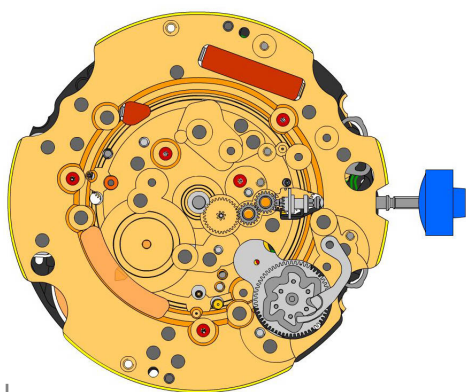




Bridle +
Bridle held by 1 screw 4000.250.


4000.250
49.



Screw



2000.574.G 50.		Main plate
3004.164 51.		Setting wheel
3004.164 52.		Setting wheel
3007.054.CO 53.		Minute wheel
2130.143 54.		Minute train bridge Minute train bridge held by 1 screw 4000.305.
4000.305 55.		Screw
3004.223 56.		Tens indicator driving wheel Parts 2030.017.CO, 3004.223 and 3500.059 must be exchanged together. The short tooth of the tens indicator driving wheel must point to the center of the movement.
3500.059 57.		Tens jumper Parts 2030.017.CO, 3004.223 and 3500.059 must be exchanged together.
2130.142 58.		Tens jumper maintaining plate
4010.306 59.		Screw
3301.242 60.		Hour wheel (Fig.2)
3315.016 61.		Friction spring
3004.224.CO 62.		Date indicator driving wheel
3500.049 63.		Date jumper

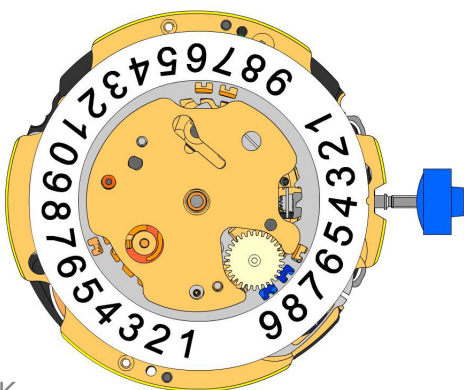

K

3504.214.AD.1.A
64. Units indicator (standard)
Nick of the indicator at 3 o'clock.




3147.054
65. Tens intermediate wheel



2130.141
66. Date indicator maintaining plate
Nick of the indicator at 3 o'clock.



3905.070
67. Date jumper spring
Insert the date jumper spring in the provided opening.

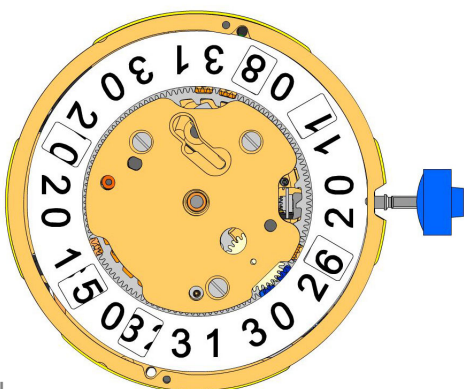

L

3504.215.AD.1.A
68. Tens indicator (standard)
Nick of the indicator at 3 o'clock.



2130.140.G
69. Date mechanism maintaining plate
Date mechanism maintaining plate held by 2 screws 4000.250.



4000.250
70. Screw



3506.072.G
71. Dial support



9014
72. Moebius 9014




124
73. Jismaa 124




9020
74. Moebius 9020



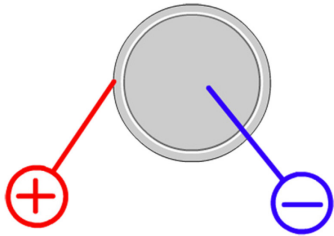


Battery	395
Voltage	1.55 V

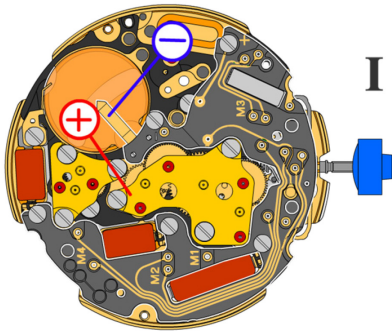


*Setting stem in position I, calendar not in gear,
60 s measuring interval for rate and consumption:*

Typical consumption	1.32 μA
Maximal consumption	1.65 μA
Instantaneous rate	-10s/M. .. +20s/M.
Lower working voltage limit	1.30 V

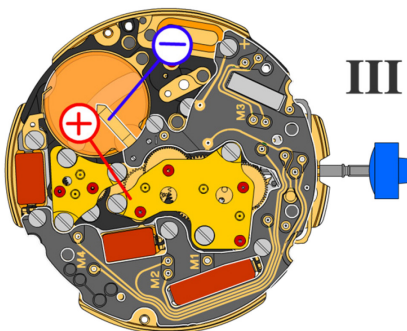

Setting stem in position III, 60 s measuring interval:


Typical consumption	0.10 μA
Maximal consumption	0.30 μA

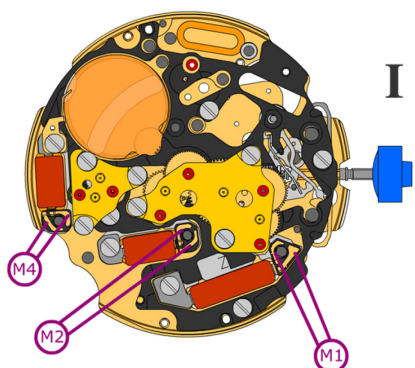


Coil resistance M1 **1.90 k Ω .. 2.10 k Ω**

Coil resistance M2 **2.20 k Ω .. 2.40 k Ω**

Coil resistance M4 **2.20 k Ω .. 2.40 k Ω**

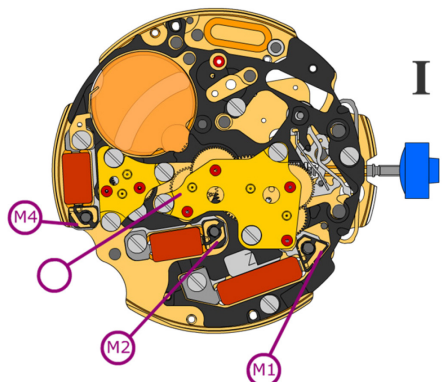

Coil isolation M1/M2/M4 **∞ k Ω**

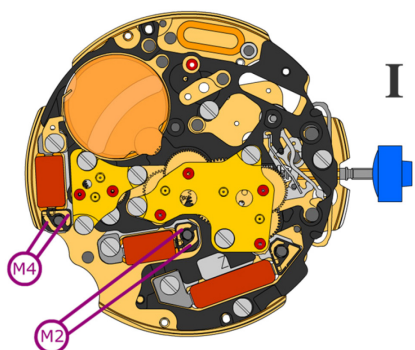

Signal generator (4.9 ms, 8 Hz):

Lower working voltage limit M2/M4 **1.30 V**