



| 2    | 2000.576.G<br>  . |     | Main plate                        |
|------|-------------------|-----|-----------------------------------|
| 65.4 | 3305.287.CO<br>2. | (*) | Cannon pinion with driver (Aig.3) |


| 2030.017.CC<br>3. |      | Centre bridge Centre bridge held by 1 screw 4000.250. Parts 2030.017.CO and 3402.009.CO must be exchanged together. |
|-------------------|------|---|
| 4000.250<br>4. T  |      | Screw   |
| 3001.045<br>5.    |      | Sliding pinion  |
| 3000.177.CC       |      | Setting stem  |
| 3017.049<br>7.    | 000  | Setting lever   |
| 3905.053<br>8.    | 650  | Setting lever jumper (2 positions) Setting lever jumper held by 1 screw 4000.250.                                   |
| 4000.250<br>9. T  |      | Screw   |
| 3015.080<br>10.   | R    | Yoke (2 positions)  |
| 3905.067<br>11.   | A    | Yoke spring   |
| 3406.030<br>12.   | 2    | Pusher jumper B Put the grey jumper between the two posts on the further side.                                      |
| 3406.038<br>13.   | ð    | Pusher jumper A Put the yellow jumper between the two posts on the closer side.                                     |
| 3622.040<br>14.   | Z Po | Stator<br>Mark  Z  on stator.   |
| 3622.039<br>15.   |      | Stator (counter 6h, 9h, chrono)   |
| 3622.039<br>16.   |      | Stator (counter 6h, 9h, chrono)   |
| 3622.039<br>17.   |      | Stator (counter 6h, 9h, chrono)   |




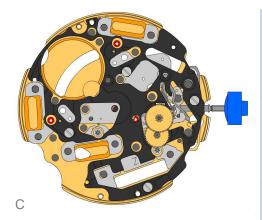

| 3603.079<br>18.      |          | Plastic bracket<br>Plastic bracket held by 4 screws 4000.250. |
|----------------------|----------|---|
| 4000.250<br>19. T    |          | Screw   |
| 3715.094.RK<br>20.   | •        | Rotor   |
| 3715.094.RK<br>21.   | <b>*</b> | Rotor   |
| 3147.046.CO<br>22. + | •        | Intermediate wheel  |
| 3136.142.CO<br>23.   |          | Second wheel (long)   |

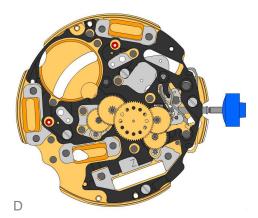


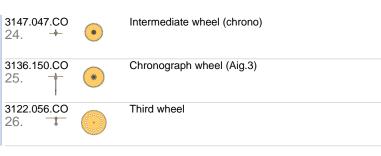

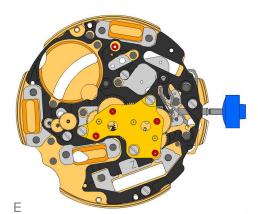


| 2020.148.G<br>27.    |                   | Train wheel bridge<br>Train wheel bridge held by 3 screws 4000.250. |
|----------------------|-------------------|---|
| 4000.250<br>28. T    | <b>\(\infty\)</b> | Screw   |
| 3715.095.RK<br>29.   | *                 | Rotor   |
| 3147.048.CO<br>30. + | *                 | Intermediate wheel (counter)  |
| 3402.006.CO<br>31.   |                   | Minute counting wheel   |




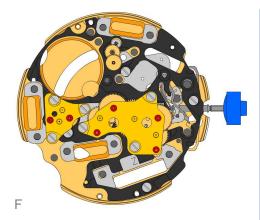

| 2020.149.G<br>32.    |         | Counter train wheel bridge<br>Counter train wheel bridge held by 3 screws 4000.250.   |
|----------------------|---------|---|
| 4000.250<br>33. T    |         | Screw   |
| 3715.095.RK<br>34    | *       | Rotor   |
| 3147.053.CO<br>35. + | •       | Intermediate wheel (counter 1/10sec)  |
| 3402.009.CO<br>36.   | <u></u> | Counting wheel 1/10 sec Parts 2030.017.CO and 3402.009.CO must be exchanged together. |

Counter train wheel bridge Counter train wheel bridge held by 3 screws 4000.250.

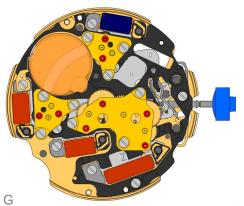


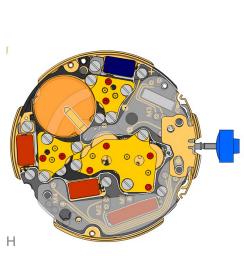


| 4000.250<br>38.    | <b>\(\infty\)</b>   | Screw  |
|--------------------|---------------------|--|
| 3621.053.RK<br>39. |                     | Coil  Attention: Please hold the coil only on the grey coil core. Coil held by screw 4000.250.                     |
| 3621.054.RK<br>40. | 6                   | Coil (counter 9h, chrono) Attention: Please hold the coil only on the grey coil core. Coil held by screw 4000.250. |
| 3621.054.RK<br>41. | 6                   | Coil (counter 9h, chrono) Attention: Please hold the coil only on the grey coil core. Coil held by screw 4000.250. |
| 3621.055.RK<br>42. |                     | Coil (counter 6h) Attention: Please hold the coil only on the grey coil core. Coil held by screw 4000.250.         |
| 4000.250<br>43. T  | <b>\(\infty\)</b>   | Screw  |
| 3601.118<br>44.    | 6                   | Contact strip<br>Contact strip held by 1 screw 4000.250.   |
| 4000.250<br>45. T  | <b>\oint{\oint}</b> | Screw  |
| 3603.034<br>46.    |                     | Battery insulator  |

2020.149.G




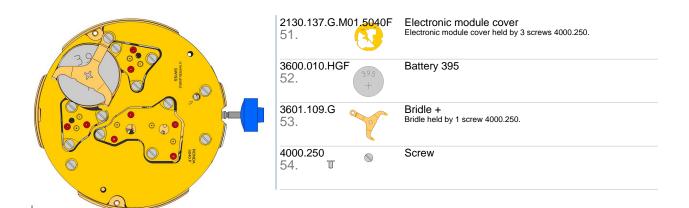





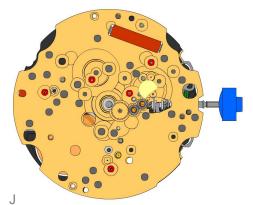

| 2000.576.G<br>55.  |      | Main plate    |
|--------------------|------|---------------|
| 3004.164<br>56.    | &°°  | Setting wheel |
| 3004.164<br>57.    | 600° | Setting wheel |
| 3007.078.CO<br>58. | •••  | Minute wheel  |

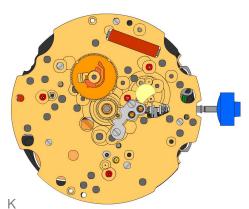

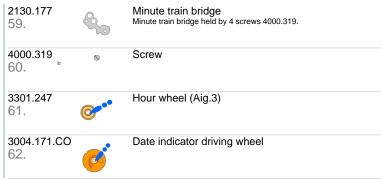


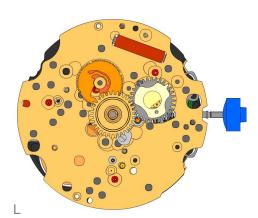



Month driving wheel

3004.173



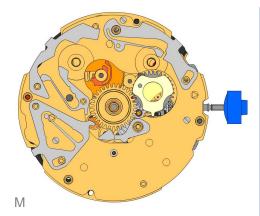

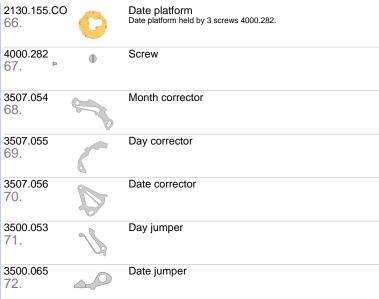

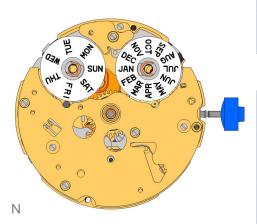


| 2130.157.G<br>73. | Combined maintaining plate Combined maintaining plate held by 4 screws 4000.286.  |
|-------------------|---|
| 4000.286<br>74.   | Screw   |
| 2130.166.G<br>75. | Corrector maintaining plate Corrector maintaining plate held by 1 screw 4000.286. |
| 4000.286<br>76.   | Screw   |
| 3905.059<br>77.   | Date jumper spring Insert the date jumper spring in the provided opening.         |
| 3508.153.AA.E.A   | Day indicator (standard)  |
| 3508.154.AE.E.A   | Month indicator(standard)   |
| 3909.028<br>80.   | Pillar spring clip  |
| 3909.028<br>81.   | Pillar spring clip  |



| 8200<br>82. | 8 | Moebius 8200 |
|-------------|---|--------------|
| 9014<br>83. | i | Moebius 9014 |
| 124<br>84.  | 8 | Jismaa 124   |
| 9020<br>85. | i | Moebius 9020 |




5040.F

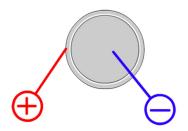

395 Battery

Voltage 1.55 V

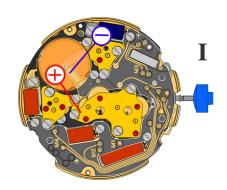


Setting stem in position I, calendar not in gear, 60 s measuring interval for rate and consumption:

Typical consumption 1.32 μΑ Maximal consumption 1.65 µA

-10s/M. .. +20s/M. Instantaneous rate

Lower working voltage limit 1.30 V

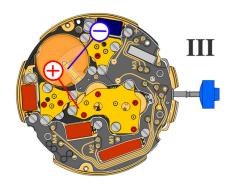


Setting stem in position III, 60 s measuring interval:


Typical consumption 0.10 μΑ Maximal consumption 0.30 μΑ



#### 5040.F

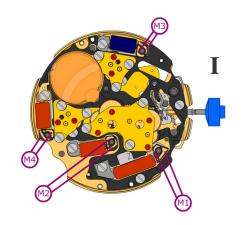


| Coil resistance M1 | 1.90 kΩ 2.10 kΩ |
|--------------------|-----------------|
| Coil resistance M2 | 2.20 kΩ 2.40 kΩ |
| Coil resistance M3 | 2.20 kΩ 2.40 kΩ |
| Coil resistance M4 | 2.20 kΩ 2.40 kΩ |

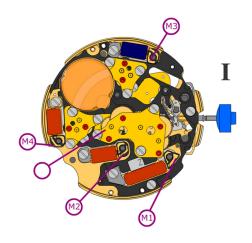

Coil isolation M1/M2/M3/M4

 $\infty k\Omega$ 

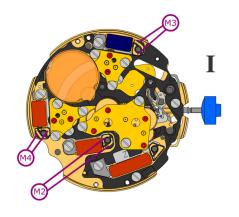

Signal generator (4.9 ms, 8 Hz):

Lower working voltage limit M2/M3/M4

1.30 V