




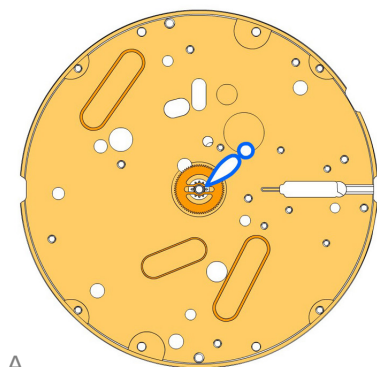

A

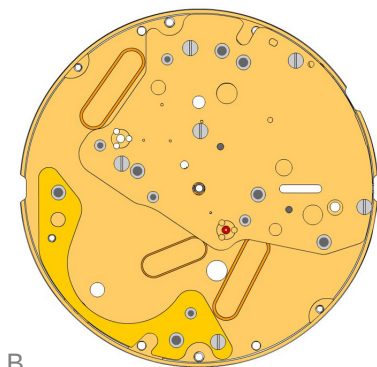

B

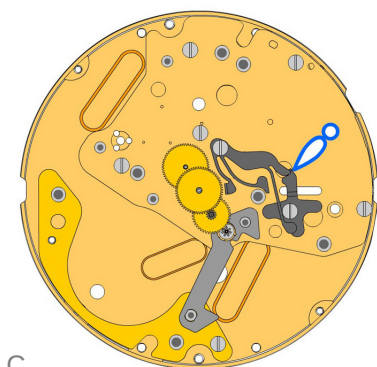

C

2000.669.G

1.



Main

3305.362.CO

2.



Cannon pinion with driver (Aig.1)

2030.027.CO

3.



Centre bridge

Centre bridge held by 5 screws 4000.250.

4000.250

4.



Screw

2130.181.CO

5.



Combined maintaining plate

Combined maintaining plate held by 1 screw 4000.250.

4000.250

6.



Screw

3016.028

7.



Lever for setting lever

Lever for setting lever held by 1 screw 4000.249.

4000.249

8.



Screw

3016.027

9.



Stop lever

Stop lever held by 1 screw 4000.249.

4000.249

10.



Screw

3622.044

11.



Stator

3715.105.RK

12.



Rotor

3147.060.CO

13.



Intermediate wheel

3122.070.CO

14.




Third wheel

3136.177.CO


15.




Centre second wheel (Aig.1)

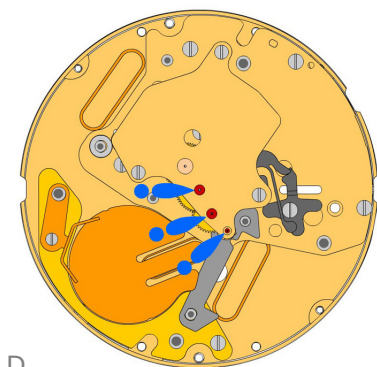

D

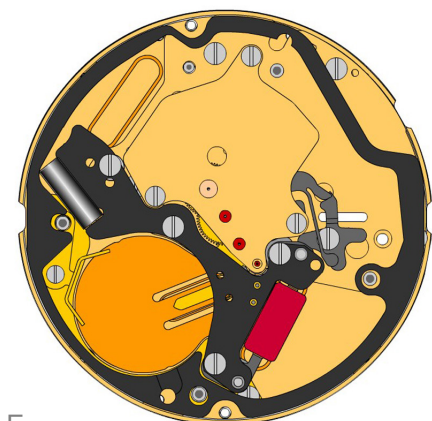

E

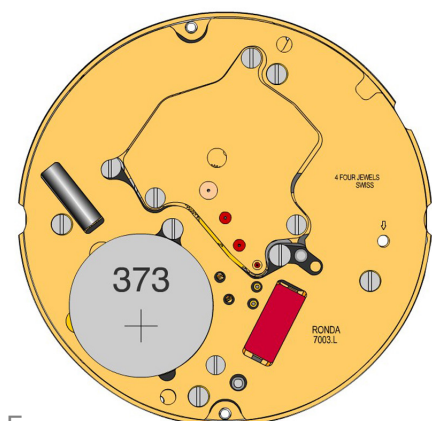

F

2020.169.G
16.  **Train wheel bridge**
Train wheel bridge held by 3 screws 4000.244.

4000.244
17.  **Screws**

3603.080
18.  **Battery insulator**

3601.120.G
19.  **Battery clamp +**
Battery clamp held by 1 screw 4000.248.

4000.248
20.  **Screw**

3503.071
21.  **Tube**

3612.195
22.  **Electronic module**
Electronic module held by 4 screws 4000.250.


4000.250
23.  **Screw**

3603.081
24.  **Spacer**


2130.182.G.M01.7003L
25.  **Electronic module cover**
Electronic module cover held by 4 screws 4000.244.

4000.244
26.  **Screws**


3600.032.HGF
27.  **Battery 381**

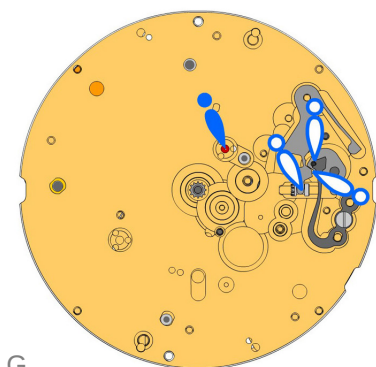

G

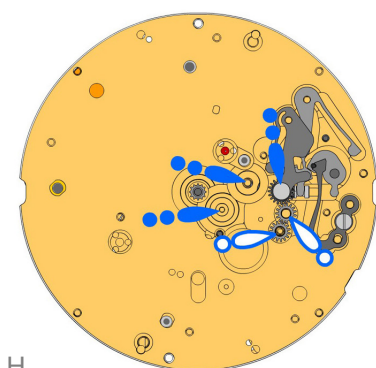


H

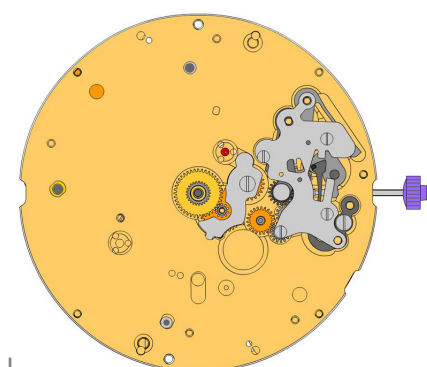


I

2000.669.G 28.		Main Plate
3017.054.CO 29.		Setting lever
3905.063 30.		Setting lever jumper (3 positions) Setting lever jumper held by 1 screw 4000.282. Tensioning the spring arm.
4000.282 31.		Screw
3001.061.FI 32.		Sliding pinion
3015.077 33.		Yoke (3 positions) Tensioning the spring arm.
3004.200 34.		Corrector setting wheel
3004.200 35.		Corrector setting wheel
3015.078.CO 36.		Rocking bar (3 positions) Tensioning the spring arm.
2130.194 37.		Setting mechanism cover Setting mechanism cover held by 4 screws 4000.305.
4000.305 38.		Screws
3000.194.CO 39.		Setting stem
3004.204 40.		Intermediate setting wheel
3007.079.CO 41.		Minute wheel
2130.185 42.		Minute train bridge Minute train bridge held by 1 screw 4000.278.
4000.278 43.		Screw
3301.296.CO 44.		Hour wheel retro (Aig.1)
3147.066.CO 45.		Date corrector setting wheel

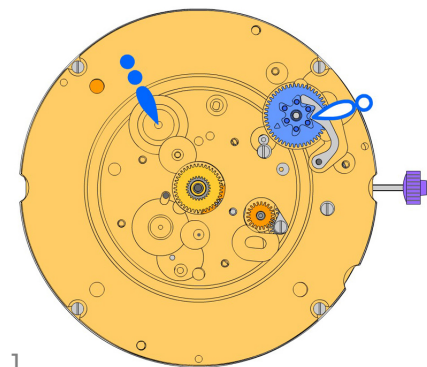

J

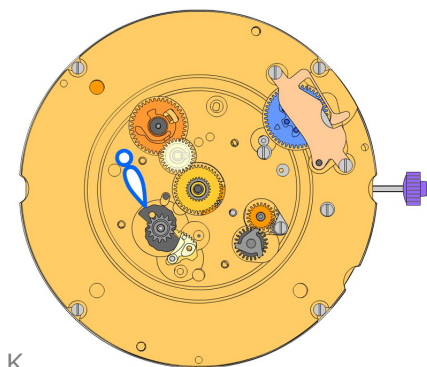

K



L

2000.671.G
46.



Main plate retro (6h)
Main plate retro held by 4 screws 4000.248

4000.248
47.



Screw

3004.220
48.



Tens indicator driving wheel
The short tooth of the tens indicator driving wheel must point to the center of the movement.

3500.072
49.



Tens jumper

2130.187
50.



Tens jumper maintaining plate
Tens jumper maintaining plate held by 2 screws 4000.279. Tensioning the spring arm.

4000.279
51.



Screw

3004.208.CO
52.



Date indicator driving wheel

3147.061
53.



Intermediate date wheel

3404.005.CO
54.



Day cam (6h)
Place parts as shown on graphics.

3406.032
55.



Day rack

3406.031
56.



Day rack lever

3507.059.CO
57.



Date corrector wheel

2130.188
58.



Date indicator plate

3905.068
59.



Date corrector spring
Date corrector spring held by 1 screw 4000.244.

3905.066
60.



Day rack lever spring

3500.069
61.



Day jumper
Tensioning the spring arm.

3500.068
62.




Date jumper


3504.229.AF.1.A
63.




Units indicator (standard)
Nick of the indicator at 3 o'clock.

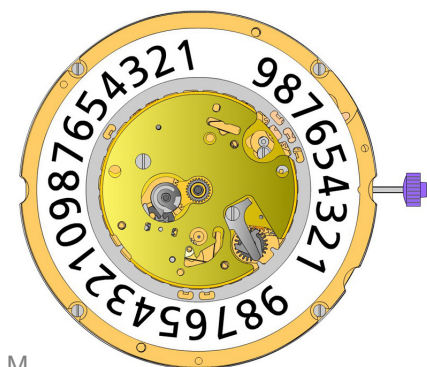

M

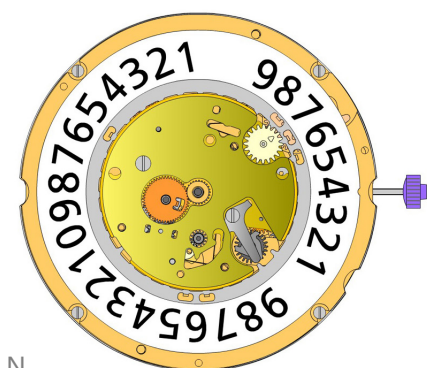


N

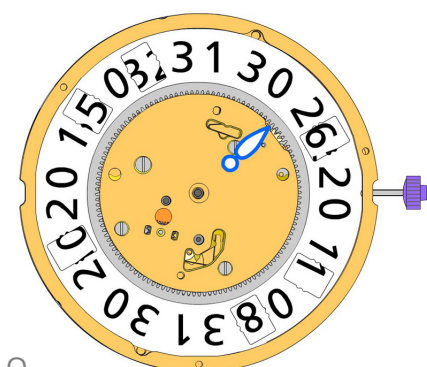

O


2130.189 64.		Date indicator maintaining plate Date indicator maintaining plate held by 1 screw 4000.250.
4000.250 65.		Screw
3905.064 66.		Date jumper spring Insert the date jumper spring in the provided opening.
3004.244 67.		Day finger Stem pos III: Turn crown forwards until the date jumps. Stem pos II: Move the date until the nick is at 3 o'clock. Position the end of the teeth against the day came pinion while turning softly in counterclockwise direction.
3004.212 68.		Days driving wheel Insert the tooth of the wheel in the flange gap, while turning softly in counterclockwise direction to ensure correct position of the day finger.
3401.082.FI 69.		Day indicator pinion
3147.062 70.		Tens intermediate wheel Place the arrow of the tens intermediate wheel in front of the half tooth of the tens indicator driving wheel.
3315.003 71.		Friction spring
3504.230.AF.1.A 72.		Tens indicator (standard) Nick of the indicator at 3 o'clock.
2130.190.G 73.		Date mechanism maintaining plate Date mechanism maintaining plate held by 3 screws 4000.320.
4000.320 74.		Screw
3506.077.G 75.		Intermediate dial support Polished version first.
3506.076.G 76.		Dial support
8200 77.		Moebius 8200
9014 78.		Moebius 9014
124 79.		Jismaa 124
9020 80.		Moebius 9020

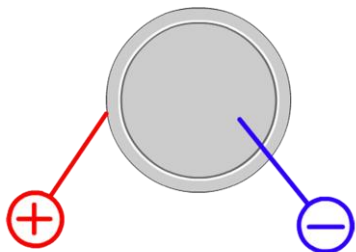

Battery

381

Voltage

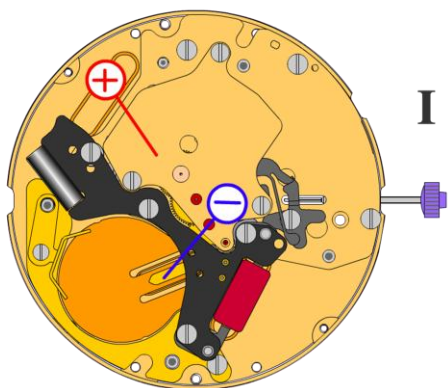1.55 V

I
*Setting stem in position I, calendar not in gear,
60 s measuring interval for rate and consumption:*

Typical consumption

1.32 μ A


Maximal consumption

3.10 μ A

Instantaneous rate

-10s/M. .. +20s/M.

Lower working voltage limit

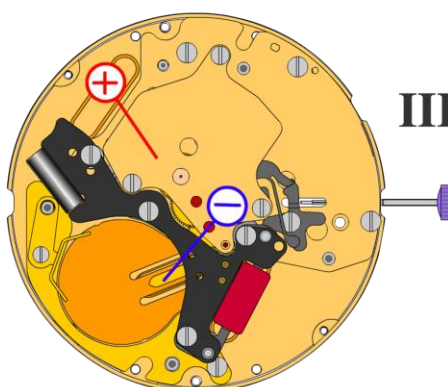1.30 V

III
Setting stem in position III, 60 s measuring interval:

Typical consumption

0.10 μ A

Maximal consumption

0.30 μ A